

PHILIPS

Food processor

Viva Collection

850 W

Compact 4 in 1 setup

2.1 L bowl

Accessories for + 30 functions

HR7769/01



Maximum variety of recipes, minimum effort

PowerChop technology for optimum chopping

The new Viva Food Processor has a 4 in 1 set-up with a 2.1 L bowl, 1.75 L blender, grinder mill and citrus press. Its accessories and attachments allow you to enjoy more than 30 functions. PowerChop technology for supreme chopping results

Maximum performance

- 850 W motor for powerful processing
- PowerChop technology for superior chopping performance
- 2 speed settings and pulse for maximum control
- Up to 5 portions in one go
- Slicing, shredding, granulating and julienne
- Accessories to easily perform 30+ functions

Designed for daily use

- Break-resistant jar for intensive use
- Sturdy base stands stable, even during kneading
- Dishwasher safe accessories

Convenient set up

- Food processor, Blender, Citrus press and Grinder mill
- In bowl storage for a proper placement of the accessories




asimpleswitch.com

Highlights

850 W motor

This Philips Food Processor offers a powerful motor with 2 speeds and pulse, providing power and control to prepare all your favorite recipes.

PowerChop technology

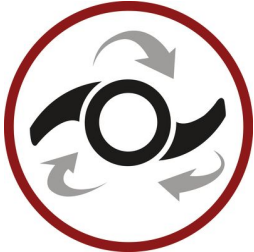

PowerChop technology is a combination of blade shape, cutting angle and inner bowl that provides a superior chopping result in both soft and hard ingredients. It is also perfect for making purées and mixing your cake batters!

2 speed settings and pulse

For best results, use the low speed setting (speed 1) to whip cream, beat eggs, create pastries and bread dough. The higher speed setting (speed 2) is well-suited to chop onions and meats, blend soups and smoothies or shred, slice, grate or rasp vegetables.

Up to 5 portions in one go

The generous 2.1L bowl (1.5 L working capacity) enables you to blend up to 5 portions of soup in one go.

6 steel disc inserts

Simply select the right disc insert (slicing, shredding, granulating and julienne) to prepare your favourite food and click it on the disc holder.

Accessories for 30+ function

The - dishwasher safe - accessories are a kneading tool to mix and knead batter and dough. A stainless steel chopping knife to prepare meat and vegetables. Various disc

inserts to handle shredding and grating. Break resistant blender of 1L for blending, crushing and stirring different ingredients. An emulsifying disc to prepare food like whipped cream and mayonnaise. A chopper mill to grind e.g. coffee beans

Break-resistant jar




A 1.75-liter break-resistant jar has a working capacity of 1 liter for up to up to 5 smoothie portions at once.

Sturdy base

Sturdy base stands stable, even during kneading

Dishwasher safe accessories

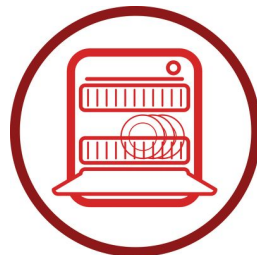

All Philips Food Processor accessories included in your box are dishwasher safe.

Compact 4 in 1 set up

Compact 4 in 1 set up: Food Processor, Blender, Citrus press and Grinder mill that allow you to prepare multiple different recipes.

In bowl storage

The big capacity of the bowl allows you to store the attachments in its inside

Specifications

Accessories

Included: Blade unit S-blade, Citrus press, Coarse shredding tool, Coarse slicing tool, Emulsifying tool, Fine shredding tool, Fine slicing tool, Granulating tool, Jar, Julienne tool, Kneading tool, Mill

General specifications

Number of speed settings: 2 + pulse
Product features: Integrated cord storage, Non-slip feet, Pulse

Service

2-year worldwide guarantee

Sustainability

Packaging: > 90% recycled materials
User manual: 100% recycled paper

Technical specifications

Capacity bowl: 2 L
Working capacity bowl: 1.5 L
Capacity jar: 1.75 L
Working capacity jar: 1.0 L
Capacity mill: 250 ml
Cord length: 1.0 m
Frequency: 50/60 Hz
Power: 850 W
RPM blender (max): 21000 rpm
RPM bowl (max): 1900 rpm
Voltage: 220-240 V

Weight and dimensions

Dimensions of product (LxWxH):
210x210x368 mm

Design

Color: Oyster metallic

Finishing

Material accessories: Stainless steel
Material jar: Plastic SAN
Material of main body: Plastic ABS



[asimpleswitch.com](https://www.asimpleswitch.com)

Philips Green Logo

Philips Green Products can reduce costs, energy consumption and CO2 emissions. How? They offer a significant environmental improvement in one or more of the Philips Green Focal Areas – Energy efficiency, Packaging, Hazardous substances, Weight, Recycling and disposal and Lifetime reliability.

