

PHILIPS

Steam generator
iron

FastCare Compact

Max 5.2 bar pump pressure

Up to 230 g steam boost

1.3 L fixed water tank

Carry lock

GC6733/20



Iron faster with 2x more steam*

Powerful, continuous steam works faster than a steam iron, with an easy-to-refill water tank and quick heat-up. Compact and lightweight for easy storage.

Fast & powerful

- Powerful steam for ultimate crease removal
- Calc-clean container included — no cartridges, no extra cost
- Ceramic soleplate for durability and easy gliding

Compact & convenient

- Lightweight and compact for easy use and storage
- Large tank for long use
- Carry lock for safe and easy transport
- Automatic shut-off when the iron is left unattended


Highlights

Ultra-powerful steam



Strong, continuous steam tackles even the thickest fabrics with ease. Watch stubborn creases melt away with an extra steam boost just where you need it. This extra steam is perfect for vertical steaming to refresh clothes and curtains, too.

Auto shut off

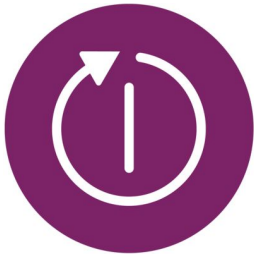

The automatic shut off function automatically switches off your steam generator iron if it has not been used for a few minutes. This saves energy and gives you peace of mind.

Safety carry lock



Lock your iron securely to the base station for easy carrying around the house and to reduce the risk of accidentally touching the hot soleplate.

1.3 L water tank



A 1.3-liter transparent tank gives you more than 1 hour of continuous use. See clearly how much water is left and refill easily at any time under the tap through the large filling door.

Smart descaling



Our built in descaling system, Smart Calc Clean reminds you when you need to descale. It includes a container to make descaling easy. This means no cartridges are required and no additional costs.

Compact and convenient



The lightweight, compact size is perfect for storage and fits conveniently on your ironing board. Exclusive ProVelocity technology makes our steam generators smaller and more compact than ever.

Ceramic soleplate



Our durable ceramic soleplate glides well on all garments. It's non-stick, scratch-resistant and simple to keep clean.

Specifications

Technology

ProVelocity steam engine

Fast crease removal

Continuous steam: Up to 110 g/min

Power: 2400 W

Pressure: Max 5.2 bar pump

Ready to use: 2 min

Steam boost: Up to 230 g

Steam-on-demand

Voltage: 220-240 V

Easy to use

Soleplate gliding performance: 3 stars

Soleplate name: Ceramic

Water tank capacity: 1300 ml

Hose length: 1.6 m

Power cord length: 1.65 m

Ready to use: Light indicator, Sound indicator

Refill any time during use

Safety auto off

Soleplate scratch resistance: 3 stars

Tap water suitable

Scale management

Descaling and cleaning: Smart Calc Clean

Descaling reminder: Light, Sound, no cartridges needed, no extra

Guarantee

2 year worldwide guarantee

Storage

Carry lock: For transportation and safety

Cord storage: Cord storage compartment

Hose storage: Hose storage compartment

Accessories included

Calc clean container

Size and weight

Packaging dimensions (WxHxL): 25 x 27 x 40 cm

Product dimensions (WxHxL): 21 x 23 x 35.4 cm

Total weight with packaging: 4.1 kg

Weight of iron: 1.25 kg

Weight of iron + base: 2.9 kg

Green efficiency

Product packaging: 100% recycable

