

PHILIPS

Jar

Daily Collection

1.8 liter

10 cups

HD3017/30



More life in every bowl

Automatic rice cooking

Nutrition is the most important element to keep healthy. Philips' rice cookers come with automatic cooking programs that better preserve the freshness and nutrients in every bowl of rice.

Smart and automatic cooking

- Automatic rice cooking
- Automatic keep warm keeps rice fresh for 12 hours
- 5 layers inner pot for even heating, cooks rice more tastier
- 3D heating for even heating and more effective warm keeping

Easy to operate


- One touch button for easy control

The ultimate in convenience

- Golden coating ensures inner pot durable and non-stick.
- Easy-to-read water level indicator
- Detachable power cord for convenient storage.

Highlights

5 layers inner pot

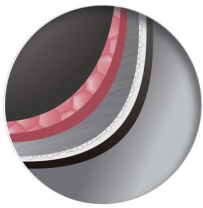

5 layers inner pot for even heating, cooks rice more tastier.

Automatic 12 hours keep warm



Use the keep warm function to keep rice warm for a longer period of time. When the cooking process is finished, the rice cooker automatically switches to the keepwarm mode

One touch button

One press button to control cook or keep warm, with clear light on the panel to show cooking status

3D heating system



There is heating system surround the rice cooker, including heater assembly on the top, heater assembly all around and main heater assembly on the bottom. 3D heating system for even heating, more effective warm keeping and better baking result

Specifications

General specifications

Automatic keep-warm keeps rice fresh for 12 hours

Easy-to-clean non-stick inner pot

Easy-to-read water level indicator

Detachable power cord for convenient storage

Spillover prevention vent

Design specifications

Materials of main body: Tin Plate

Dimensions (L x W x H): 269X269X253 mm

Weight appliance: 3.7 kg

Color(s): Green

Color of control panel: Orange

Technical specifications

Voltage: 220 V

Frequency: 50 Hz

Wattage: 400 W

Cord length: 1.2 m

Capacity: 1.8/10 Litres / cups

Accessories

Plastic steam tray

Rice scoop

Measuring cup

