

PHILIPS

Vacuum cleaner
with bag

Performer Expert

Energy efficiency class A**

AirflowMax technology

TriActiveMax nozzle

Animal+, Allergy+

FC8726/19



Full performance

Less energy consumption

The new Philips Performer Expert delivers highest dust pick-up ratings* on all floors thanks to the AirflowMax technology and unique TriActiveMax nozzle, engineered for highest dust pick-up. Great cleaning results, even as the bag fills up!

Outstanding cleaning results

- Energy efficiency class A
- Revolutionary AirflowMax technology for extreme performance
- Energy efficient motor for high-power results
- New 3-in-1 TriActiveMax nozzle maximizes dust pick-up

Perfect for homes with pet hair

- Super Turbo brush, perfect for homes with pet hair

Ultimate convenience

- 5L dust capacity for longer cleaning
- 11m long reach for convenient cleaning
- Variable power setting

Integrated Anti-Allergy system


- Allergy friendly quality tested by ECARF
- HEPA13 with HEPA AirSeal retains more than 99% of dust
- s-bag Ultra Long Performance captures even more fine dust



asimpleswitch.com

Highlights

Energy efficiency class A

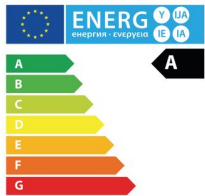

This vacuum cleaner is engineered to achieve full performance with an energy efficiency class A.

AirflowMax technology



AirflowMax technology maximizes the airflow, allowing the dustbag to unfold uniformly, so you get high performance, even as the bag fills-up!

High efficiency motor



The high efficiency motor has been optimized to use less energy in order to generate more airflow.

TriActiveMax nozzle



TriActiveMax nozzle with 3-in-1 cleaning actions perfectly seals to the floor to maximize dust pick-up. 1) It gently opens the carpet with

its specially designed soleplate to remove the dust deep down. 2) It sucks up big bits with its larger opening at the front 3) It sweeps up the dust and dirt closely alongside furniture and walls with its two side brushes.

Super Turbo brush




The Super Turbo brush allows deep cleaning of carpets, easily removing hair and fluff. The rotating brush inside the nozzle actively removes small dust particles and pet hair, resulting in a better cleaning performance. The wheels of the nozzle prevent damage in case of use on hard floors.

5L dust capacity




The specially designed 5L dust chamber allows you to make optimal use of your dust bag, so you can clean for longer.

Long reach

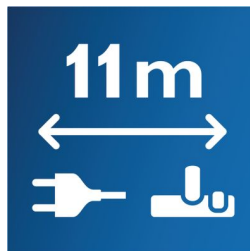


The 11m reach allows you to clean a larger surface without having to switch the plug.

Power control

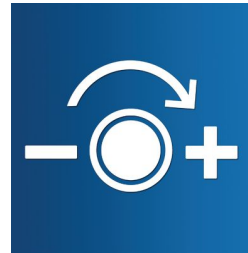

The variable power setting allows you to select the optimal level of suction for the different types of surfaces you vacuum.

HEPA13 Anti-allergy filtration

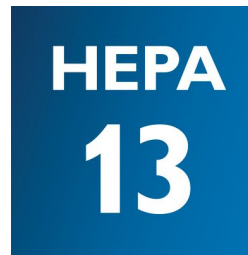

HEPA13 filter and AirSeal capture even the finest dust before the air is blown out for a dust-free environment and clean, allergen free air. The exhaust air is even cleaner than the air in the room.



[asimpleswitch.com](https://www.asimpleswitch.com)

Philips Green Logo

Philips Green Products can reduce costs, energy consumption and CO2 emissions. How? They offer a significant environmental improvement in one or more of the Philips Green Focal Areas – Energy efficiency, Packaging, Hazardous substances, Weight, Recycling and disposal and Lifetime reliability.

Specifications

Performance

Annual energy consumption: 27,8 kW·h

Sound power level: 78 dB

Input power (IEC): 650 W

Airflow (max): 30,2 l/s

Vacuum (max): 16,3 kPa

Design

Color: Cognac brown

Filtration

Dust capacity: 5 L

Dust bag type: s-bag Ultra Long Performance

Exhaust filter: HEPA 13

Motor filter: Triple layer microfilter

HEPA Air Seal

Usability

Action radius: 11 m

Cord length: 8 m

Power control: Electronic on appliance

Tube type: Metal 2-piece telescopic tube

Tube coupling: SmartLock

Wheel type: Rubber

Carrying handle: Top and front

Dust full indicator

Nozzles and accessories

Standard nozzle: TriActiveMax nozzle

Additional nozzle: Super Turbo brush, Hard floor nozzle

Accessories included: Crevice tool, 2-in-1 brush/small nozzle

Weight and dimensions

Weight of product: 5 kg

Dimensions of product (LxWxH): 500 x 310 x 300 mm

Sustainability

Packaging: > 90% recycled materials

User manual: 100% recycled paper

