

PHILIPS

Handheld vacuum cleaner

MiniVac

12 V Car

Bagless Cyclonic

5 accessories and storage bag

Car (with car plug)

FC6141/61



Clean your car like never before

Bagless cyclonic airflow and aerodynamic nozzle

Enjoy a better cleaning result with the powerful Philips MiniVac 12 V for your car. The 2-stage bagless cyclonic airflow guarantees lasting performance, while the aerodynamic nozzle design ensures a superior dust pick-up.

Superior cleaning results

- Aerodynamic nozzle design for a better dust pick-up

Optimal filtration

- 2-stage bagless cyclonic airflow for optimal filtration

High power guaranteed

- Suitable for 12 V usage with car plug

Ideal to clean your car

- Car plug for unlimited runtime
- Storage bag for storage in your car
- Wide range of accessories for all purposes

Easy to use

- Looped handle ensure optimum grip

Highlights

2-stage bagless cyclonic




The bagless cyclonic airflow keeps the dirt inside rotating to ensure optimal, high suction power and lasting cleaning performance. Its 2-stage filtration system ensures that, once inside, the dirt cannot escape. The first filter blocks most dirt, while the second filter traps the finer dust particles.

Aerodynamic nozzle design



The aerodynamic nozzle design of the Philips MiniVac is created to ensure an optimum dust pick-up of even the most fine dust particles. The ergonomic shape of the nozzle helps you to clean even the most hard-to-reach areas.

Clean all areas in your car

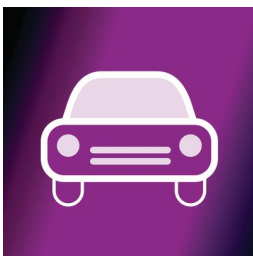

The Philips MiniVac Car is ideal to clean your car as it is equipped with a car plug to reach even the most difficult areas of your car without the hassle of charging the MiniVac. Therefore, it is always ready to use!

Comfortable grip



The Philips Mini Vac has a looped handle that ensures optimum grip. You can grab the Mini Vac in any way you like.

Storage bag



The storage bag allows you to keep all the accessories and car plug in one place, to ensure you have all you need to clean your car at any time!

Wide range of accessories



The Philips MiniVac comes with a wide range of accessories to make the minimum effort when cleaning your car. It includes a small and large brush tool, ideal to clean even the hard-to-reach places. All in all, it is an ideal combination for cleaning your car!

Specifications

Design

Color: Deep black with silver accents
Design features: Translucent dust chamber

Performance

Noise level (Lc IEC): 81 dB
Airflow (max): 840 l/min
Input power (max): 120 W
Suction power (max): 22 W
Vacuum (max): 4.2 kPa

Filtration

Filter system: 2-stage cyclonic action
Dust capacity: 0.5 L

Usability

Special features: Soft touch handle

Nozzles and accessories

Accessories included: Brush, Crevice tool, Brush tool, Large brush tool, Long crevice tool
Other accessories: Flexible hose, Car plug, Storage bag

