




Philips StudioPower
Vacuum cleaner with bag
with TriActive nozzle

1250W

AirflowMax technology
Parquet

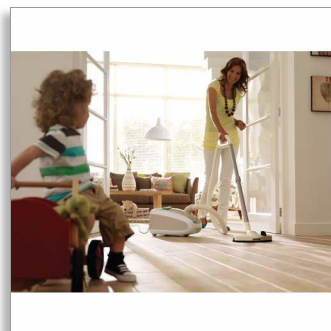

FC9087



Greener every day

Save 30% energy with highly efficient HD motor*

The StudioPower from Philips combines the performance of a big vacuum cleaner with the compactness of a small one. Its big power, small size, 2 handles, and large reach offer great flexibility, so you can quickly move through your home.

Low power consumption, high-power results

- New 1250 Watt HD motor generates max. 350 Watt suction power

Less waste in the environment

- At least 37.5% of plastics is sustainable

Highly efficient anti-allergy system

- HEPA AirSeal plus HEPA 13 filter
- ECARF Seal of Quality for trusted results

Easy cleaning, even around furniture

- TriActive nozzle with unique 3-in-1 action

Scratch-protection for parquet floors

- Parquet nozzle with soft brush hairs for scratch-protection



asimpleswitch.com




asimpleswitch.com

PHILIPS


Highlights

New 1250 Watt HD motor

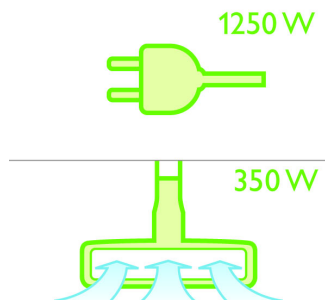

Highly efficient 1250 Watt HD (High Density) motor generates 350 Watt max. suction power, which means that you use 30% less energy without giving in on the cleaning result.


HEPA AirSeal, HEPA 13 filter

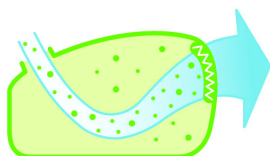

HEPA AirSeal & HEPA 13 filter


This Philips vacuum cleaner has been designed in such a way that all the air taken in is passed through the washable HEPA 13 filter (99.95% filtration) before it is exhausted. No escape is possible.

Parquet nozzle

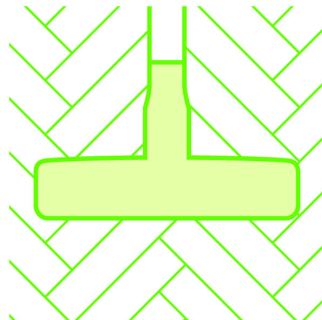

No more risk of scratches thanks to this nozzle with soft brush hairs, especially designed to carefully clean your hard floors.

Comfortable carrying handles

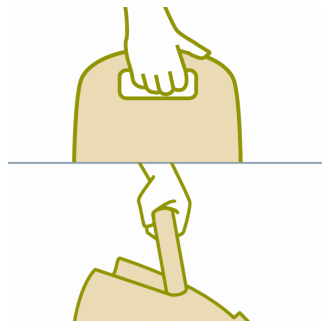

This vacuum cleaner has not one, but two carrying handles. When it is on its wheels, there is a handle on top which enables you to easily move the cleaner around with very little bending. The second handle on the front side of the appliance enables you to comfortably carry it around in an upright position.

Specifications

Design

- Color: Greige with green

Filtration

- Dust bag type: s-bag
- Exhaust filter: Ultra Clean Air HEPA 13 washable filter
- Dust capacity: 3 L
- HEPA Air Seal

Nozzles and accessories

- Accessories included: Crevice tool
- Accessory storage: On handgrip
- Additional nozzle: Parquet nozzle
- Standard nozzle: TriActive nozzle

Performance

- Airflow (max): 39 l/s
- Input power (IEC): 1250 W
- Noise level (Lc IEC): 78 dB
- Suction power (max): 350, 400 W
- Vacuum (max): 28 kPa

Usability

- Carrying handle: Top and front
- Clean Comfort cassette
- Tube coupling: Button
- Dust full indicator
- Power control: Electronic on appliance
- Tube type: Metal 2-piece telescopic tube
- Wheel type: Rubber
- Action radius: 11 m
- Cord length: 8 m

Weight and dimensions

- Dimensions of product (LxWxH): 450 x 240 x 240 mm
- Weight of product: 6 kg



Issue date 2016-05-19

Version: 3.1.1

© 2016 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* Compared to 2000 Watt Philips vacuum cleaner; Philips internal measurement, 2008.