

# PHILIPS

Steam generator  
iron

PerfectCare Expert

Max 6.5-bar pressure

Up to 340 g steam boost

Carry lock

1.5 l detachable water tank

GC9241/02



## Ultra fast ironing

with no temperature adjustment required

Iron any ironable garment from silk, to linen, to cotton, to cashmere...in any order, without having to adjust. Your Philips PerfectCare iron delivers fast results without risk of burn or shine for all your garments. Truly simple ironing.

### Carefree ironing, no temperature setting required

- Iron everything from jeans to silk with no temperature setting required
- Safe to leave the hot soleplate on the ironing board
- Tested and approved by independent textile experts

### Fast and powerful ironing


- Ready to use in 2 minutes with unlimited refill
- Up to 6.5 bar pressure
- Descale your appliance effectively and easily to prolong its lifespan
- New SteamGlide soleplate is Philips premium soleplate
- Automatically turned off for safety and energy saving
- 1.5 L detachable water tank, up to 2 hours of ironing
- Lock your iron securely to the base station
- Steam boost of up to 340 g



[asimpleswitch.com](http://asimpleswitch.com)

# Highlights

## Steam ready in 2 minutes

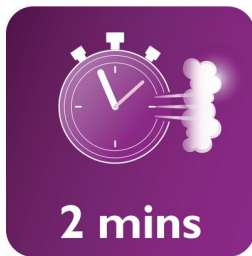

Steam is ready to use in 2 minutes and can be refilled at any time during ironing.

## Up to 6.5 bar pressure



The more steam, the faster the ironing. Consistent powerful steam is generated which penetrates deep inside the garments making ironing both faster and better. Steam power can be regulated to suit your needs.

## Easy De-calc




Ultra-long-lasting steam performance: Philips' exclusive Easy De-Calc function provides the ideal way to get rid of limescale and extend the lifetime of your steam generator iron. Your iron will remind you to de-calc with light and sound. When your appliance is cold, simply open the Easy De-Calc knob and collect the dirty water and limescale in a cup.

## New SteamGlide soleplate



The new SteamGlide soleplate is the best Philips soleplate. Is extremely scratch resistant, glides excellently and is easy to clean.

## Safety auto off

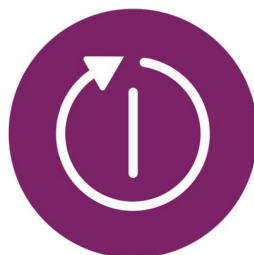

The safety auto-off function automatically switches off the appliance if it has not been used for 5 minutes, to save energy.

## 1.5 L detachable water tank



The water tank can be removed to be refilled easily under the tap. The large filling hole makes refilling fast. Thanks to the 1.5 L water tank capacity, you can iron up to 2 hours continuously without any refills.

## OptimalTEMP technology



Now you can iron everything from jeans to silk with no temperature setting required. Guaranteed no burn on all ironable fabrics. Revolutionary technology with both the Advanced Smart Control Processor, which precisely controls the soleplate temperature so that you don't need to, and the powerful cyclonic steam chamber, which delivers consistent, powerful steam, making ironing easier and faster.



[asimpleswitch.com](https://www.asimpleswitch.com)

## Philips Green Logo

Philips Green Products can reduce costs, energy consumption and CO2 emissions. How? They offer a significant environmental improvement in one or more of the Philips Green Focal Areas — Energy efficiency, Packaging, Hazardous substances, Weight, Recycling and disposal and Lifetime reliability.

# Specifications

## Fast and powerful crease removal

Soleplate: SteamGlide  
OptimalTEMP technology  
Steam boost: 340 g  
Vertical steaming  
Pressure: Up to 6.5  
Steam tip  
Power: 2400 W  
Safe rest  
Steam output control

## Easy to use

Water tank capacity: 1500 ml  
Filling and emptying water: Detachable water tank, Extra-large filling hole

Refill any time  
Heat-up time: 2 min  
Safety auto off  
Storage solution: Carry lock  
Hose storage: Hose storage compartment  
Cord storage: Cord storage compartment  
Power cord length: 1.8 m  
Cord freedom (swivel): 180 degree cord freedom  
Hose length: 1.7 m  
Safe for all fabrics: Even for delicates such as silks

## Calc management

Suitable for tap water  
Calc clean solution: Easy De-calc  
Calc clean reminder

## Technical specifications

Packaging dimensions: 30.5 x 33.5 x 49.1 cm  
Product dimensions: 28.3 x 26.3 x 42.4 cm  
Weight of iron: 1.2 kg  
Weight of iron + base: 5 kg

