

# PHILIPS

Steam generator  
iron

PerfectCare Elite

Max 6.5 bar pressure

Up to 450g steam boost

1.8 L water tank capacity

Detachable water tank



GC9622/20



## Most powerful steam for the fastest ironing\* with Ultra-light iron

PerfectCare Elite is the best and most efficient steam generator iron from Philips. With OptimalTEMP technology, you can now iron from jeans to silk with no temperature setting needed. Guaranteed no burns on all ironable garments.

### **No temperature setting needed, guaranteed no burn**

- Iron jeans to silk, no need to change temperature setting
- Safe to leave the hot soleplate on the ironing board
- Tested and approved by independent textile experts

### **Fast ironing with continuous powerful steam**

- Powerful steam for ultimate crease removal
- Easy and efficient descaling system
- Philips best gliding and most scratch resistant soleplate
- Save energy with ECO mode

### **Ultimate ironing experience**

- Light weight and comfortable to handle
- Large detachable water tank for easy refilling
- Safe and secure carry lock
- Automatic switch off for safety and energy saving



[asimpleswitch.com](http://asimpleswitch.com)


# Highlights

## 1.8 L detachable water tank



The detachable water tank allows you to easily refill anytime without stopping the appliance. It has a large filling hole so you can simply fill the water tank under the tap. It has a 1.8 L capacity, so you get the convenience of up to 2 hours of continuous use, with no need to top-up the tank.

## Energy saving

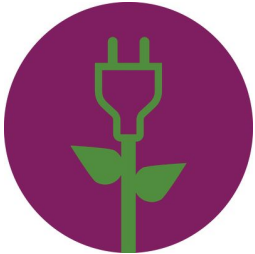

ECO mode allows you to save energy without compromising your ironing results. The ECO mode uses a reduced amount of steam, but still a sufficient amount to iron all your garments.

## OptimalTEMP technology



With OptimalTEMP technology you'll no longer have to waste time changing temperature settings, waiting for the temperature to adjust or pre-sorting clothes. Iron fabrics from jeans to silk, with guaranteed no burns thanks to the perfect combination of temperature and continuous powerful steam.

## Safe carry lock



Your steam generator iron includes a safe carry lock which securely fastens your iron to its base without the risk of slipping or someone touching the hot soleplate. It ensures safe and easy transportation around the house, to and from storage.

## Safe rest



Innovative OptimalTEMP technology guarantees no burn on all ironable fabrics. As well as the reassurance this provides whilst ironing, it also means you can leave the hot iron soleplate directly on your cotton ironing board without causing any damage. This helps to reduce any discomfort to your wrists, as you won't need to lift the iron to and from its base as often.

## Safety auto off



The safety auto off function automatically switches off your steam generator iron if it has not been used for a few minutes. This saves energy and gives you safety peace of mind.

## Tested and approved



This iron is tested and approved by independent textile expert institutes such as DWI, IWTO and Woolmark, for its excellent ironing performance. The Woolmark Apparel Care program helps consumers identify quality laundry products that are approved by The Woolmark Company for use on wool products. Philips with its exclusive OptimalTEMP technology is so far the only ironing brand able to be certified with the Gold standard from Woolmark. You can be confident that our Woolmark-approved apparel care products are ideally suited for any wool garments.



[asimpleswitch.com](http://asimpleswitch.com)

## Philips Green Logo

Philips Green Products can reduce costs, energy consumption and CO2 emissions. How? They offer a significant environmental improvement in one or more of the Philips Green Focal Areas – Energy efficiency, Packaging, Hazardous substances, Weight, Recycling and disposal and Lifetime reliability.

# Specifications

## Easy to use

**Cord freedom (swivel):** 360 degree cord freedom  
**Detachable water tank**  
**Extra large filling hole**  
**Heat up time:** 2 min  
**Hose length:** 1.7 m  
**Low water alert**  
**Power cord length:** 1.8 m  
**Precision steam tip**  
**Ready to use:** Light indicator, Sound indicator  
**Refill any time during use**  
**Safe on all ironable fabrics:** Even delicates like silk  
**Safety auto off**  
**Soleplate gliding performance:** 5 stars  
**Soleplate name:** T-ionicGlide  
**Soleplate scratch resistance:** 5 stars  
**Tap water suitable**  
**Water tank capacity:** 1800 ml

## Fast crease removal

**Continuous steam:** Up to 135 g/min  
**Power:** Max 2400 W  
**Pressure:** Max 6.5 bar  
**Ready to use:** 2 min  
**Steam boost:** Up to 450 g  
**Steam-on-demand**  
**Variable steam levels**  
**Vertical steam**  
**Voltage:** 220 - 240 V

## Green efficiency

**Energy saving mode**  
**Product packaging:** 100% recyclable  
**User manual:** 100% recycled paper

## Guarantee

2 year worldwide guarantee

## Scale management

**Descaling and cleaning:** Easy De-calc Plus  
**Descaling reminder:** Light, Yes

## Size and weight

**Packaging dimensions (WxHxL):** 31 x 35 x 51 cm  
**Product dimensions (WxHxL):** 23.3 x 28.5 x 45.3 cm  
**Weight of iron:** 0.8 kg  
**Weight of iron + base:** 5.1 kg

## Storage

**Carry lock:** For transportation and safety  
**Cord storage:** Cord storage compartment, Velcro fix  
**Hose storage:** Hose storage compartment

## Technology

**Cyclonic steam chamber**  
**For all ironable fabrics**  
**No burns**  
**No temperature settings needed**  
**OptimalTEMP technology**  
**Smart Control Processor**

