

PHILIPS

Vacuum cleaner
with bag

Performer Compact

2000 W

Super Clean Air filter

3L



FC8383/61



Full performance, high suction power

Compact yet powerful with AirflowMax technology

The new Philips Performer Compact vacuum cleaner delivers top cleaning performance with minimum effort. AirflowMax technology keeps the suction power stronger for longer. The ExtraClean nozzle removes dust efficiently on all floors.

Remarkable cleaning results

- 2000 W motor for strong suction power
- Revolutionary AirflowMax technology for strong suction power
- New ExtraClean nozzle for thorough cleaning on all floors

Clean air filter system

- S-bag Classic Long Performance lasts up to 50% longer
- Super Clean Air filter captures >99% of particles

Effortless cleaning

- ActiveLock couplings to easily adjust to each cleaning task
- Compact and light for effortless cleaning and easy storage
- On-board accessories for ultimate convenience



reddot award 2016
winner

Highlights

S-bag Classic Long Performance



This new Philips synthetic dust bag has been developed to provide long lasting vacuum cleaner performance, i.e. a high level of suction power and maximum filtration, up to the moment the dust bag is full and ready for disposal.

2000 Watt motor



2000 W motor generates strong suction power for excellent cleaning results.

ActiveLock couplings




The ActiveLock couplings allow you to easily connect and disconnect the different nozzles and accessories from the telescopic tube while cleaning.

AirflowMax technology



The unique AirflowMax technology keeps the suction power stronger for longer* to use the bag to the very end. The technology is build around the optimization of three key elements: 1) Unique ribs profile inside the dust chamber to maximize airflow around the dustbag and enable the use of the entire bag surface. 2) Specially designed dust chamber capacity that allows the dustbag to fully unfold uniformly. 3) High quality, non-clogging fibre structures in the dustbag absorb dust without blocking the pores, thus avoiding a reduction in suction power.

Compact and lightweight

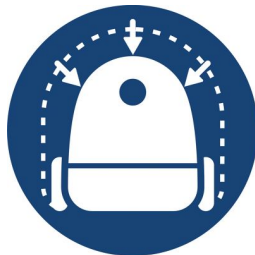


Thanks to its small size, the appliance can be easily stored, saving valuable space. The light weight makes it easy to carry around.

On-board accessories

The vacuum cleaner is designed with integrated accessories, so that you do not need to carry extra pieces around while you clean. The crevice tool is located on the canister, always ready to use.

Super Clean Air filter

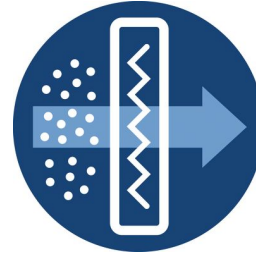

The Super Clean Air filter captures >99% of harmful particles such as pollen, dust mites or pet hair. So you can enjoy clean healthy air in your home!



IF DESIGN AWARD

Award-winning products are selected by the top names in design. Each year, iF International Forum Design GmbH organizes one of the world's most celebrated and valued design competitions: the iF DESIGN AWARD. Recognized as a symbol of design excellence around the world, the iF DESIGN AWARD welcomes over 5,000 submissions from 70 countries every year.



reddot award 2016 winner

RED DOT DESIGN AWARD 2016

The Red Dot Design Award is an international product design and communication design prize. Winning an award in this competition is proof that the creative minds have a vision and are able to commit, to carry out, to research and to experiment - and that they are a name to watch out for in the future. There are prize categories for product design, design agencies, and design concepts.

Specifications

Performance

Input power (IEC): 1800 W
Input power (max): 2000 W
Sound power level: 83 dB
Suction power (max): 375 W
Vacuum (max): 23,5 kPa

Usability

Action radius: 8 m
Carrying handle: Front
Cord length: 5 m

Tube type: Metal 2-piece telescopic tube
Wheel type: Rubber
Tube coupling: ActiveLock

Design

Color: Deep Black

Filtration

Dust bag type: s-bag Classic Long Performance
Dust capacity: 3 L
Exhaust filter: Super Clean Air filter
Motor filter: 1 layer foam filter

Nozzles and accessories

Accessories included: Crevice tool, Integrated brush
Standard nozzle: ExtraClean nozzle

Sustainability

Packaging: > 90% recycled materials
User manual: 100% recycled paper

Weight and dimensions

Dimensions of product (LxWxH): 400 x 282 x 251 mm
Weight of product: 4.5 kg

