

# PHILIPS

Vacuuming and  
Mopping System

AquaTrio

3-in-1



FC7070/01



## Vacuums, mops and dries in one go

Save 50% effort. Save up to 50% time.\*

Philips' new AquaTrio FC7070/01 simultaneously vacuums, mops and dries hard floors, saving you up to 50% time and effort. Fast-rotating micro-fibre brushes thoroughly remove dirt, stains and liquids in one go, giving you perfect results.

### Superior performance

- Unique Triple-Acceleration Technology for great results
- Floor dries up to 50% faster\*

### Constant cleaning power

- Separate clean and dirty water tanks

### Ideal for all hard floors\*\*

- Wood, parquet, laminate, vinyl, ceramic, natural stone etc

### Easy to use and efficient


- Effective with cold/warm tap water, with/without detergent
- Cleans more than 60 m2 with one tank of water
- Indicator for full dirty water tank/empty clean water tank
- Self-rinsing appliance with flushing tray
- Save up to 50% energy. Save up to 70% water\*



[asimpleswitch.com](http://asimpleswitch.com)


# Highlights

## Triple-Acceleration Technology

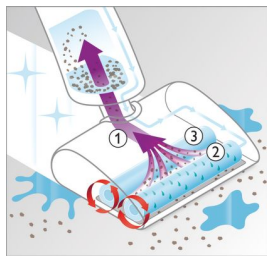


Triple-Acceleration Technology delivers three simultaneous cleaning actions: Cyclonic vacuuming — efficiently sucks up dust and loose dirt; wet mopping — the first fast-rotating brush removes stains and spills effectively; drying — the second fast-rotating brush absorbs the remaining water, reducing drying time by up to 50%\*

## Fast-rotating brushes

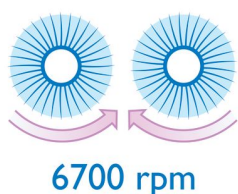


Powerful and gentle micro-fibre brushes deliver 6700 rpm to effectively remove dirt and stains while adapting to the different shapes of the floor and even cleaning in crevices. Brushes clean themselves during use, thanks to the constant clean water applied to them, and to the centrifugal forces which drive the dirt and water picked up from the floors out of the fibres and into the dirty water tank. For optimal cleaning performance replace the AquaTrio brushes every 6 months.

## Works with/without detergent

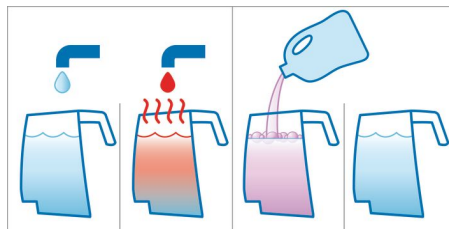


With AquaTrio you achieve excellent results using just tap water. But if required, you can also add your detergent of choice. You can also use cold or warm water. It's up to you!

## Cleans more than 60 m<sup>2</sup>

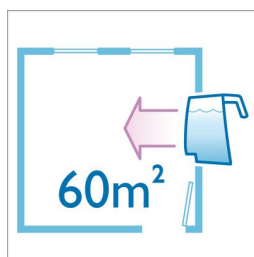


One full tank cleans more than 60 m<sup>2</sup> of hard floor, therefore taking care of large areas while using a minimal amount of water.

## Indicator for tank levels

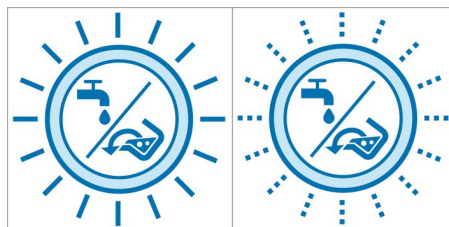


An LED indicator illuminates when the dirty water tank needs emptying, or starts flashing when the clean water tank needs refilling. The appliance will stop operating.

## Self-rinsing appliance

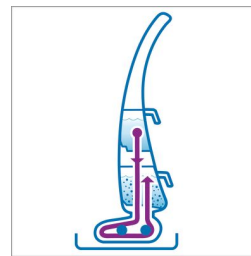

No need to manually clean the Philips vacuum cleaner every time; the Philips AquaTrio rinses itself. Simply place the appliance on the specially-designed flushing tray, pour a cup of tap water into it, and switch it on for a few seconds.

## Save 50% energy/70% water\*

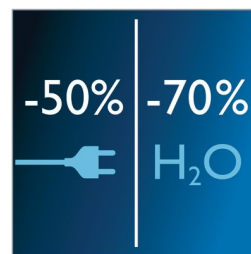


Highly-efficient power usage saves you up to 50% in energy consumption compared to vacuuming. You also use up to 70% less water than when wet mopping.

## For all hard floors

Perfect for all hard floors\*\*: wood, parquet, laminate, vinyl and linoleum, ceramics and tiles, marble and natural stone. Excluding non-treated floors.

## Separate water tanks

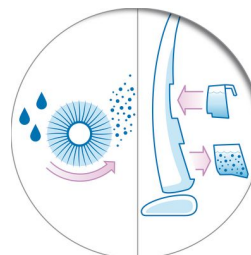

Separate clean and dirty water tanks ensure that you always mop with clean water, so you avoid spreading the dirt around.

# Specifications

## Nozzles and accessories

Accessories: Flushing tray

Nozzle width: 320 mm

## Usability

Handle for easy lifting

Moves forwards or backwards

Action radius: 8.5 m

Change brush while cleaning: Not needed

Clean water tank capacity (max): 0.65 l

Clean water: Refill indicator: Yes, LED indicator

Cord length: 8 m

Detergents that can be used: any detergent or just water

Dirty tank: Full indicator: Yes, LED indicator

Dirty water tank capacity (max): 0.8 l

Filters to clean: None

Power supply: Corded

Start up time: Immediately

Suitable for wood and parquet

Surface coverage per tank: more than 60 m<sup>2</sup>

## Performance

Cleaning Technology: Triple-Acceleration Technology

Mopping element: 2 microfibre rotating brushes

Input power (IEC): Max. 500 W

Mechanical power: 6700 rpm

## Sustainability

Energy efficient

## Filtration

Filter system: Cyclonic. No filter to clean

## Weight and dimensions

Dimensions of product (LxWxH): 305 x 320 x 1150 mm

Dimensions of product (L x W x H): 790 x 390 x 395 mm

Weight of product: 7.3 kg

Weight with packaging: 10.8 kg

