

PHILIPS

Vacuum cleaner
with bag

SilentStar

Eco

SilentSeal nozzle

HEPA 13 washable filter

Parquet



FC9304/01



The power of silence

Tough on dust, gentle on your ears

Enjoy a relaxing, undisturbed home life with Philips SilentStar vacuum cleaner. With its unique SilentSeal nozzle, this vacuum cleaner delivers powerful cleaning performance with minimal noise.

Minimum noise, maximum suction

- Optimal performance & low noise due to the SilentSeal nozzle
- Aerodynamic air channel reduces noise to a quiet 70 dB

Low power consumption, high-power results

- 1250 Watt HD motor delivering 2000 Watt performance*

Highly efficient anti-allergy system

- HEPA AirSeal plus HEPA 13 filter

Scratch-protection for parquet floors

- Parquet nozzle with soft brush hairs for scratch-protection

Easy to use all over the house

- Two comfortable carrying handles for extra convenience




asimpleswitch.com



asimpleswitch.com


Highlights

SilentSeal nozzle

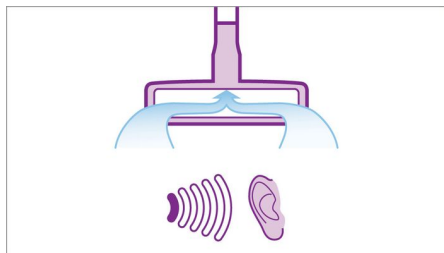


The SilentSeal nozzle contributes to an optimal performance in both low noise and dust and fluff pick up. It is optimally sealed for efficient airflow resulting in best cleaning performance – made by WesselWerk.

Aerodynamic air channel

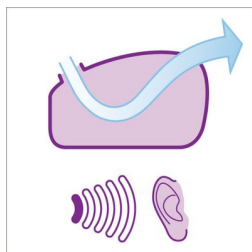

The air channel has been finetuned to make sure the air slides a smooth way out that minimizes noise creation. Additionally a special motor suspension reduces vibrations.

New 1250 Watt HD motor

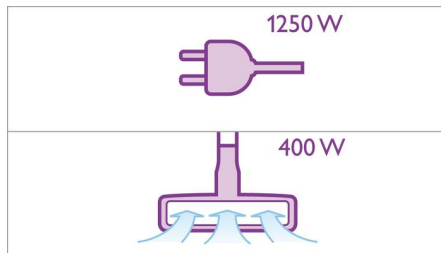


Highly efficient 1250 Watt HD (High Density) motor generates max. 400 Watt suction power, which means that it uses 30% less energy with the same cleaning result as a 2000 Watt appliance.*

HEPA AirSeal, HEPA 13 filter




This Philips vacuum cleaner has been designed in such a way that all the air taken in is passed through the washable HEPA 13 filter (99.95% filtration) before it is exhausted. No escape is possible.

Parquet nozzle

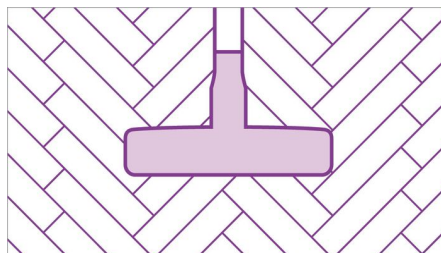

No more risk of scratches thanks to this nozzle with soft brush hairs, especially designed to carefully clean your hard floors.

Comfortable carrying handles

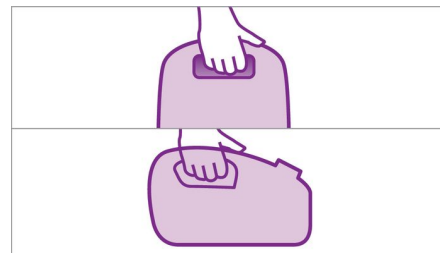

This vacuum cleaner has not one, but two carrying handles. When it is on its wheels, there is a handle on top which enables you to easily move the cleaner around with very little bending. The second handle on the front side of the appliance enables you to comfortably carry it around in an upright position.



[asimpleswitch.com](https://www.asimpleswitch.com)

Philips Green Logo

Philips Green Products can reduce costs, energy consumption and CO2 emissions. How? They offer a significant environmental improvement in one or more of the Philips Green Focal Areas – Energy efficiency, Packaging, Hazardous substances, Weight, Recycling and disposal and Lifetime reliability.

Specifications

Design

Color: Dark aubergine

Filtration

Dust bag type: s-bag

Exhaust filter: Ultra Clean Air HEPA 13 washable filter

Dust capacity: 3.5 L

HEPA Air Seal

Nozzles and accessories

Accessories included: Brush, Crevice tool, Small nozzle

Accessory storage: On handgrip

Additional nozzle: Parquet nozzle

Standard nozzle: Low noise SilentSeal nozzle

Performance

Airflow (max): 42 l/s

Input power (IEC): 1250 W

Input power (max): 1250 W

Noise level (Lc IEC): 70 dB

Suction power (max): 400 W

Vacuum (max): 32 kPa

Sustainability

Packaging: > 90% recycled materials

User manual: 100% recycled paper

Usability

Carrying handle: Top and front

Clean Comfort cassette

Tube coupling: Button

Dust full indicator

Power control: Electronic on appliance

Tube type: Metal 2-piece telescopic tube

Wheel type: Rubber

Action radius: 11 m

Cord length: 8 m

Weight and dimensions

Dimensions of product (LxWxH): 500 x 290 x 250 mm

Weight of product: 6.8 kg

