


Saeco PicoBaristo
Deluxe
Super-automatic
espresso machine

- 13 varieties
- Integrated premium milk carafe
- Stainless Steel Front
- 12-step adjustable grinder

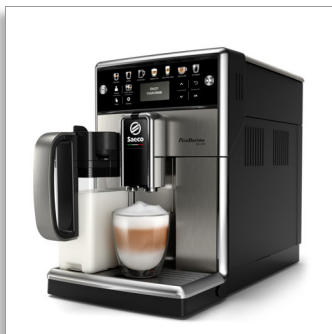

SM5573/10

Exquisite coffee, easily crafted to your taste

Explore the world of coffee through common recipes such as Espresso and Cappuccino or through specialty coffee drinks like Americano or Espresso Macchiato

Convenient Experience

- Featuring AquaClean for up to 5000* cups without descaling
- Removable brewing unit guarantees visual hygiene reassurance
- Bean container with aroma seal to keep beans fresh longer
- Quick Milk Clean cleans your milk spout with hot water

High Quality Coffee

- 20,000 cups of finest coffee with durable ceramic grinders
- CSA badge: Saeco extracts the best part of your coffee beans
- Fast preparation with high-performance water boiler
- LattePerfetto for dense milk foam with fine texture


Personalized variety

- 12 World's famous beverages at a touch
- 4 profiles: Simply, store your personal taste preferences
- Advanced display & touch icons to quickly access your drinks
- CaffeDuo Prepare & enjoy double serving of any coffee recipe

 **Saeco**

PHILIPS

Saeco, a Philips brand



Highlights

100% Ceramic grinders



Our grinders are made of high-tech ceramic: exceptionally hard and precise. Fresh beans are gently ground, without risk of overheating: extracting all the best flavors and aroma, delivering a superior coffee taste for at least 20,000 cups.

External Endorsement



Saeco technology allows you to extract the best flavors from your favorite coffee beans for intense and authentic aroma and taste (roasted, chocolaty, nutty, fruity, flowery, spicy)

High-Performance boiler



Flawless coffee calls for perfect temperatures. Our high performance Thermoblock is made with light aluminum and a stainless steel body, which heats up to the optimal temperatures, fast

AquaClean Filter



AquaClean

AquaClean is our patented water filter, designed to improve the quality of your coffee by purifying water. It also prevents scale buildup in the water circuit of your coffee machine: make up to 5000* cups without descaling by replacing the filter regularly.

LattePerfetto



LattePerfetto for dense milk foam with fine texture

Removable Brewing Unit



Removable brewing unit guarantees visual hygiene reassurance. Alternatively, Saeco brewing unit offers automatic cleaning with our specialized cleaning tablets.

12 World's famous coffees



Explore the world of coffee from familiar recipes such as Espresso and Cappuccino as well as specialty coffee drinks like Americano or Espresso Macchiato.

4 User profiles



Everyone's personalized favorites can be saved in up to 4 user profiles using the convenient display.

Touch-icons display

One-touch access to 7 coffee recipes and user profiles for seamless experience. Craft your coffee the way you prefer by customizing volume, temperature, taste or strength and more.

Bean container with aroma seal

Bean container with aroma seal to keep beans fresh longer

CaféDuo

Prepare and enjoy single or double servings of different coffee drinks with one touch.

Specifications

Accessories

- Included: Measuring scoop, Water hardness test strip, Cleaning brush, Brew group grease, AquaClean filter

Finishing

- Material of main body: ABS Plastic

General specifications

- Customizing per drink: Adjustable coffee strength, Adjustable cup volume, Adjustable temperature
- Type of carafe: Premium carafe
- Type of display: LCD
- Milk Solution: Integrated Milk Carafe, Quick Milk clean
- Ease of cleaning & maintenance: AquaClean filter compatible
- Ease of use and comfort: Removable spout
- Special functions: Ground coffee option

Service

- 2-year worldwide guarantee

Sustainability

- Energy label: A-class
- Power consumption stand-by: < 0.5 W

Technical specifications

- Capacity milk carafe: 0.5 L
- Capacity waste container: 15 servings
- Capacity water tank: 1.8 L
- Frequency: 50 Hz
- Max. cup height: 163 mm
- Voltage: 230 V
- Coffee bean capacity: 250 g

- Cord length: >100 cm
- Filter compatibility: AquaClean
- Product dimensions: 221 x 340 x 430 mm
- Waste container: Frontal access
- Water tank: Access from the top
- Weight of product: 9.1 kg
- Country of origin: Romania

Customization

- Aroma Strength Settings: 5
- Coffee and Milk Length: Adjustable
- Grinder Settings: 12
- Pre Brew Aroma control
- Temperature settings: 3
- User Profiles: 4

Other features

- Auto-Rinse & Guided descaling
- Gusto perfetto
- Main Switch ON / OFF button
- Quick Heat Boiler
- Removable brew group

Variety

- Beverages: Espresso, Coffee, Americano, Espresso Double, Ristretto, Caffè crema, Hot water, Espresso Lungo, Cappuccino, Latte Macchiato, Milk froth, Café au Lait, Espresso Macchiato, Melange
- Coffee Powder Option
- Double Cup
- Milk Double Cup: No

Design

- Color: Stainless steel & black