

Philips 9000 series  
Pressurised steam  
generator

Auto Calc-Clean

GC9040



# Powerful and hassle-free ironing

## Unique Auto Calc-Clean function

This fast and powerful ironing system removes hassle with the unique Auto Calc-Clean function. Removing scale from the system is something you no longer have to do; it is done for you. Giving you a superb, hassle-free ironing experience

### Fast and powerful ironing

- Up to 5 bars of steam pressure for fast ironing
- Continuous steam up to 120 g/min
- SteamGlide soleplate is Philips premium soleplate

### Comfortable ironing

- Ergonomic and lightweight 1.2 kg iron

### Easy set-up and storage

- Lock and carry your system effortlessly with one hand
- Easy one touch cord storage — just press the button

### Hassle-free scale removal

- Removes scale from your system automatically


### Safe ironing

- System shuts-off automatically when iron is left unattended

**PHILIPS**  
sense and simplicity


## Highlights

### Ergonomic iron

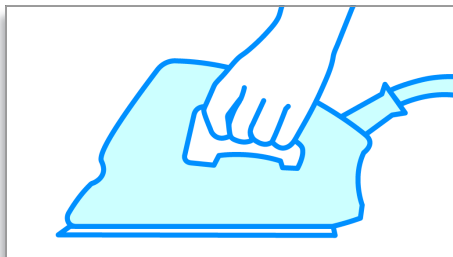


The ergonomic design of the iron facilitates comfortable ironing by putting less strain on the wrist. The upwardly sloping handle ensures a natural position reducing strain during ironing. The iron design also prevents the repetitive movements caused by placing an iron on its heel. The iron is light (1.2 kg) for an easy and comfortable ironing experience.

### SteamGlide soleplate

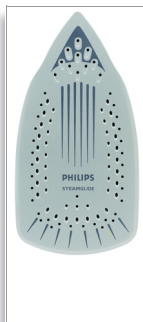

SteamGlide soleplate is the best Philips soleplate. It has great scratch resistance, excellent gliding and is easy to clean.

### Auto Calc-Clean function

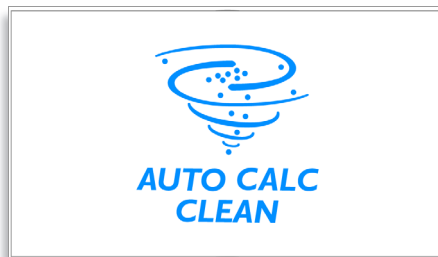


The Auto Calc-Clean function automatically cleans your ironing system of scale. A two-minute scale removal cycle is activated automatically when it is time to clean your system. All you have to do is empty the detachable rinse tank. It keeps your system as new and powerful as the day you bought it.

### Automatic cord winder



Thanks to the automatic cord winder, you can just press the button to automatically retract the power cord.

### Automatic safety shut-off

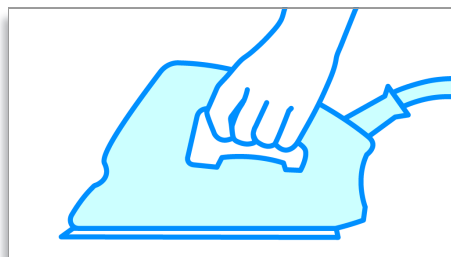

For your safety, the automatic safety shut-off switches the ironing system off when it is left unattended. The ironing system can be reactivated by pressing any button.

## Specifications

### Fast and powerful crease removal

- Soleplate: SteamGlide
- Continuous steam output
- Continuous steam output: 120 g/min
- Steam boost: 170 g
- Vertical steam
- Steam pressure: Up to 5 Bar
- Variable steam settings
- Steam tip
- Power: 1800 - 2200 W

### Easy to use

- Water tank capacity: 1000 ml + rinse tank 500 ml
- Filling and emptying water: Detachable water tank, Extra large filling hole
- Refill any time
- Heat-up time: 2 min
- Soft grip
- Safety auto off
- Storage solution: Carry lock
- Cord storage: Automatic cord winder
- Power cord length: 1.8 m
- Hose length: 1.9 m

### Calc management

- Suitable for tap water
- Calc clean reminder

### Technical specifications

- Voltage: 220 - 240 V
- Product dimensions: 44.5 x 24.5 x 32.6 cm
- Weight of iron: 1.1 kg
- Weight of iron + base: 6.6 kg

### Accessories

- Heat-resistant iron mat

