

PHILIPS

mini kettle

0.8 L 900 W

1 cup ind.

brushed metal



HD4619/20



Boil just what you need

Save up to 50% energy

The unique "one cup indicator" of this mini kettle HD4619/20 allows you to boil only the water you need, without taking up too much space in your kitchen. Therefore, you can easily save up to 50% energy and reduce impact on environment.

Boil what you need

- One cup indicator to boil only the water you need

Easy to experience

- Hinged lid with large opening for easy filling and cleaning
- Easy to read water level indicators on both sides
- Light indicates when the kettle is switched on
- Cord winder for easy storage
- Cordless 360° pirouette base for easy lifting and placing

Fast boiling and easy cleaning

- Flat heating element for fast boiling and easy cleaning
- Robust metal kettle with brushed stainless steel finishing
- Anti-calc filter for a clean cup of water

Safe to use

- Cool wall for a safe touch
- Four-way safety system




asimpleswitch.com



asimpleswitch.com

Highlights

One cup indicator

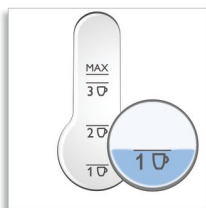

Enabling consumers to boil the amount of water they need, and therefore saving of up to 50% energy and water, contributing to a better environment.

Pilot light



Elegant blue light incorporated in the on/off switch indicates when the kettle is on.

Hinged lid



Hinged lid with large opening for easy filling and cleaning, also avoiding steam contact.



Flat heating element



The stainless steel concealed element of the Philips kettle ensures fast boiling and easy cleaning.

Anti-calc filter



Anti-calc filter for a clean cup of water and a cleaner kettle.

Cordless 360° pirouette base



Cordless 360° pirouette base for easy lifting and placing.

Specifications

Design specifications

Color(s): brushed metal

Materials: Heating element: Stainless steel, Housing: Stainless steel & PP, Switch & toolholder: Polypropylene

General specifications

Cordless

Non slip feet

Ergonomic grip

Easy spout filling

Wide opening lid

Cord storage

Automatic shut-off

Boil-dry protection

360 degrees base

Lid as well as spout filling

Flat heating element

Technical specifications

Capacity: 0.8 l

Power: 900 W

Cord length: 0.75 m

Voltage: 220-240 V

Frequency: 50-60 Hz

Dimensions

Product dimensions (WxDxH):

15.8x18.5x23.3 cm

Packaging dimensions (WxDxH):

22.5x22.5x22.5 cm

Service

2-year worldwide guarantee



asimpleswitch.com

Philips Green Logo

Philips Green Products can reduce costs, energy consumption and CO2 emissions. How? They offer a significant environmental improvement in one or more of the Philips Green Focal Areas – Energy efficiency, Packaging, Hazardous substances, Weight, Recycling and disposal and Lifetime reliability.