

PHILIPS

Steam generator
iron

PerfectCare Expert
Plus

Max 7.5 bar pressure

Up to 480g steam boost

1.8L detachable watertank

Ultra-light iron



GC8942/20



Incredibly light and powerful for speed and comfort

PerfectCare Expert Plus is designed for your comfort and convenience. Ultra-light and easy to handle, but still with powerful steam to achieve great results faster. With OptimalTEMP technology to guarantee no burns on all ironable garments.

No temperature setting needed, guaranteed no burn

- OptimalTEMP technology, no temperature settings required
- No burns – guaranteed

Fast ironing with continuous powerful steam

- Powerful steam for ultimate crease removal
- Easy and efficient descaling system for lasting performance
- SteamGlide Advanced soleplate, ultimate gliding & durability
- Save energy with ECO mode

Extra convenience

- Ultra-light weight and comfortable iron to handle
- Large 1.8L detachable water tank for easy refilling
- Carry lock for safe and easy transport
- Automatic shut off when iron is left unattended

Highlights

No temperature setting needed



Iron everything from silk to jeans without adjusting the temperature. Thanks to OptimalTEMP, no dial or settings are needed. So there's no more pre-sorting the laundry, or waiting for the iron to heat up and cool down. You're ready for any fabric, anytime.

No burns – guaranteed



Thanks to OptimalTEMP technology, we guarantee this iron will never cause burns to any ironable fabric. You can even leave it resting face down on your clothes or ironing board. No burns, no shine. Guaranteed.

Ultra-powerful steam



Strong, continuous steam tackles even the thickest fabrics with ease. Watch stubborn creases melt away with an extra steam boost just where you need it. This extra steam is perfect for vertical steaming to refresh clothes and curtains, too.

Ultra-light weight iron



The iron is amazingly light and comfortable to handle, gliding easily and reducing wrist strain. Its minimal weight also makes it easy and effective for vertical steaming of curtains and hanging clothes.

SteamGlide Advanced soleplate



Our superior SteamGlide Advanced soleplate delivers smooth gliding performance on any fabric. Its stainless steel base is twice as hard as aluminum, and our patented 6-layer coating with its advanced titanium layer effortlessly glides on any fabric for the fastest results.

Easy De-Calc



Regular descaling protects your iron, extends its lifetime, and ensures the best steam performance. Our exclusive Easy De-Calc system collects limescale continuously with an

indicator light to tell you when it needs emptying. Simply remove the plug and let the water and scale particles flow out.

1.8L detachable water tank




1.8-liter transparent tank gives you up to 2 hours of continuous use. When the water tank is empty, you will be reminded by the indicator light and you can refill easily at any time under the tap through the large filling door.

Safety carry lock



Lock your iron securely to the base station for easy carrying around the house and to reduce the risk of accidentally touching the hot soleplate.

safe and easy auto shut off

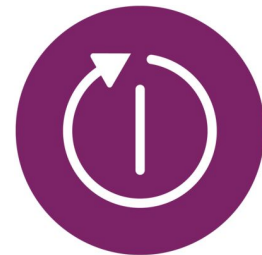

The automatic shut off function automatically switches off your steam generator iron if it has not been used for a few minutes. This saves energy and gives you peace of mind.

Specifications

Technology

Cyclonic steam chamber
For all ironable fabrics
No burns
No temperature settings needed
OptimalTEMP technology

Fast crease removal

Continuous steam: Up to 120 g/min
Power: Max 2100 W
Pressure: Max 7.5 bar
Ready to use: 2 min
Steam boost: Up to 480 g
Steam-on-demand
Vertical steam
Voltage: 220 - 240 V

Easy to use

Safe on all ironable fabrics: Even delicates like silk
Soleplate gliding performance: 5 stars

Soleplate name: SteamGlide Advanced
Water tank capacity: 1800 ml
Detachable water tank
Hose length: 1.7 m
Low water alert
Power cord length: 1.65 m
Precision steam tip
Ready to use: Light indicator
Refill any time during use
Safety auto off
Soleplate scratch resistance: 5 stars
Tap water suitable

Scale management

Descaling and cleaning: Easy De-calc
Descaling reminder: Light

Storage

Carry lock: For transportation and safety
Hose storage: Hose storage compartment

Size and weight

Packaging dimensions (WxHxL): 31 x 31 x 47 cm
Product dimensions (WxHxL): 23.9 x 26.9 x 42.6 cm
Total weight with packaging: 5.5 kg
Weight of iron: 0.8 kg
Weight of iron + base: 4 kg

Guarantee

2 year worldwide guarantee

Green efficiency

Energy saving mode
Energy saving*: 45 %
Product packaging: 100% recyclable
User manual: 100% recycled paper

