

PHILIPS

Bagless vacuum cleaner

PowerPro

PowerCyclone 5

2 accessories

EPA 12 filter

FC8769/01



40% more dust pick-up for a better clean

With PowerCyclone technology

The new Philips PowerPro vacuum cleaner picks up more dust in one go, so your floor gets cleaner with fewer strokes. You can therefore spend more time doing the things you really enjoy.

More dust pick-up for faster cleaning

- PowerCyclone 5 technology separates dust and air in one go

Extra long reach for convenient cleaning

- More cleaning with less effort

Integrated Anti-Allergy system

- EPA 12 filter with 99.5% filtration of dust

Easy to clean

- Advanced dust container design for hygienic emptying



asimpleswitch.com

Highlights

PowerCyclone 5 Technology



PowerCyclone 5 technology maximizes airflow and performance by separating dirt from air in one go. It delivers remarkable cleaning results through highly efficient steps: 1) Air enters fast into the PowerCyclone thanks to the air inlet design. 2) The curved airpass quickly accelerates the air in the cyclonic chamber to separate the dust from the air. 3) The optimized exit blades separate dirt from the cyclone and into the dust bucket.


Easy to empty dust container



The dust container is carefully designed to dispose collected dirt without creating a dust cloud. It is one-hand operated and thanks to its

unique shape and smooth surface, you can easily control the emptying of the dust container.

10 m action radius

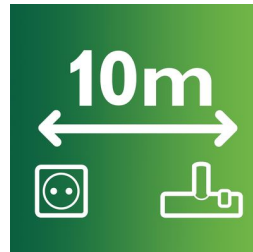

10 m action radius for cleaning with less effort.

EPA 12 filter



This special outlet filter captures 99.5% of the dust before the air is blown back into your room, ensuring a clean, dust-free, environment.

Specifications

Performance

Annual energy consumption: 46 kW·h

Sound power level: 78 dB

Input power (IEC): 1250 W

Airflow (max): 28,5 l/s

Vacuum (max): 27 kPa

Design

Color: Titanium and green

Filtration

Dust capacity: 2 L

Exhaust filter: EPA 12 filter

Motor filter: Lifetime washable filter

HEPA Air Seal

Usability

Action radius: 10 m

Cord length: 7 m

Power control: Electronic on appliance

Tube type: Metal 2-piece telescopic tube

Tube coupling: Easy release

Wheel type: Rubber

Carrying handle: Top and front

Nozzles and accessories

Standard nozzle: Multi-purpose nozzle

Accessories included: Crevice tool, Small nozzle, Alma nozzle

Accessory storage: On tubeclip

Sustainability

Packaging: > 90% recycled materials

User manual: 100% recycled paper

Weight and dimensions

Weight of product: 5.5 kg

Dimensions of product (LxWxH): 550 x 292 x 292 mm



asimpleswitch.com

Philips Green Logo

Philips Green Products can reduce costs, energy consumption and CO2 emissions. How? They offer a significant environmental improvement in one or more of the Philips Green Focal Areas – Energy efficiency, Packaging, Hazardous substances, Weight, Recycling and disposal and Lifetime reliability.

