

PHILIPS

Vacuum cleaner
with bag

Performer Active

AirflowMax technology

TriActive+ nozzle

Animal

FC8526/09



Full performance

Less energy consumption

The new Philips Performer Active delivers full cleaning performance thanks to the AirflowMax technology and the unique TriActive+ nozzle, engineered for high dust removal.

Remarkable cleaning results

- Revolutionary AirflowMax technology for extreme performance
- New 3-in-1 TriActive+ nozzle picks up coarse and fine dust
- A-class performance on hard floors

Perfect for homes with pet hair

- Turbo brush, perfect for homes with pet hair

Maximum convenience

- 4L dust capacity for longer cleaning
- Reach all corners thanks to the extra long ergonomic grip
- Variable power setting

Clean air filter system

- EPA10 filter system with AirSeal for healthy air
- S-bag Classic Long Performance lasts up to 50% longer



asimpleswitch.com

Highlights

AirflowMax technology



AirflowMax technology maximizes the airflow, allowing the dustbag to unfold uniformly, so you get high performance, even as the bag fills-up!

TriActive+ nozzle



The TriActive+ nozzle applies 3 cleaning actions in one go: 1) It gently opens the carpet with its specially designed soleplate to remove the dust deep down. 2) It sucks up big bits with its larger opening at the front. 3) It sweeps up the dust and dirt alongside furniture and walls with its two side brushes.

A-class on hard floors



This product achieves the highest cleaning performance class on hard floors. 100% of dust is picked up!

Turbo brush




The Turbo brush allows deep cleaning of carpets, easily removing hair and fluff. The rotating brush inside the nozzle actively removes small dust particles and pet hair, resulting in a better cleaning performance.

4L dust capacity



The specially designed 4L dust chamber allows you to make optimal use of your dust bag, so you can clean for longer.

Power control

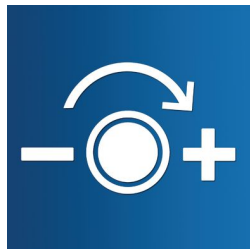

The variable power setting allows you to select the optimal level of suction for the different types of surfaces you vacuum.

Extra long ergonomic grip



This ergonomically shaped grip is convenient in use. Its extra long design gives you farther reach, so you can easily clean hard to reach places.

EPA10 Clean air system



EPA10 filter and AirSeal capture the finest dust before the air is blown out for a dust-free environment and clean, healthy air.



asimpleswitch.com

Philips Green Logo

Philips Green Products can reduce costs, energy consumption and CO2 emissions. How? They offer a significant environmental improvement in one or more of the Philips Green Focal Areas – Energy efficiency, Packaging, Hazardous substances, Weight, Recycling and disposal and Lifetime reliability.

Specifications

Performance

Annual energy consumption: 33.5 kW·h

Sound power level: 79 dB

Input power (IEC): 750 W

Airflow (max): 29,3 l/s

Vacuum (max): 18,9 kPa

Design

Color: Soft bronze

Filtration

Dust capacity: 4 L

Dust bag type: s-bag Classic Long

Performance

Exhaust filter: EPA10 washable filter

Motor filter: Microfilter

EPA AirSeal

Usability

Action radius: 9 m

Cord length: 6 m

Power control: Electronic on appliance

Tube type: Metal 2-piece telescopic tube

Tube coupling: Conical

Wheel type: Rubber

Carrying handle: Front

Dust full indicator

Nozzles and accessories

Standard nozzle: TriActive+ nozzle

Additional nozzle: Turbo brush, Hard floor nozzle

Accessories included: Crevice tool, Small nozzle

Sustainability

Packaging: > 90% recycled materials

User manual: 100% recycled paper

Weight and dimensions

Weight of product: 5.2 kg

Dimensions of product (LxWxH): 447 x 304 x 234 mm

