

# PHILIPS

Pressurized ironing  
system

6400 series

70 gr

GC6405



## Double your ironing speed with pressurized steam

### Compact powerful ironing system

Have all the convenience of a compact sized system iron and double your ironing speed with pressurized steam.

#### **Fast and powerful ironing**

- Up to 4 bars of steam pressure for fast ironing
- Continuous steam up to 70 g/min for fast crease removal

#### **Comfortable ironing**

- Ergonomically and lightweight 1.2kg iron
- Smooth-gliding, durable stainless-steel soleplate

#### **Easy to use**

- Easy set-up and storage

#### **Reaches into tricky areas**

- Steam tip allows you to have steam in hard-to-reach areas


# Highlights

## Up to 4 bars steam pressure



Double your ironing speed with pressurized steam. Pressurized steam penetrates deep into fabrics, making your ironing fast and easy, even on difficult fabrics.

## Ergonomic iron

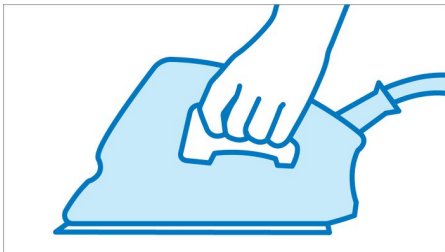

The ergonomic design of the iron facilitates comfortable ironing by putting less strain on the wrist. The upward sloping handle ensures a natural position reducing strain during ironing. The iron design also prevents the repetitive movements caused by placing an iron on its heel. The iron is light (1.2kg) for an easy & comfortable ironing experience.

## Continuous steam up to 70 g/m


Continuous steam up to 70 g/min helps to efficiently remove all creases.

## Easy set-up and storage




Easy set-up and storage

## Stainless-steel soleplate

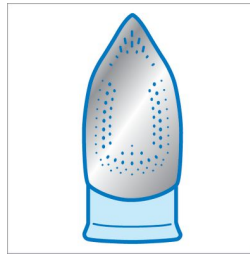

Smooth-gliding, durable stainless-steel soleplate

## Steam tip

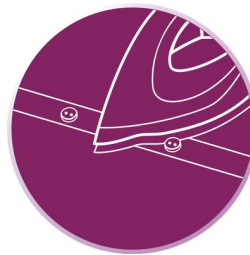

The unique steam tip of this Philips iron, combines a particularly pointed front of the soleplate with special elongated steam slots in the tip, to reach right into the smallest and most difficult areas for the best ironing results.

# Specifications

## Comfortable ironing

Suitable for tap water  
 Extra long hose for maximum reach: 1.7 m  
 Extra-long cord for maximum reach: 1.9 m  
 Ergonomic Iron design: Ergonomically designed iron for comfortable ironing

## Safe ironing

Overheat safety stop: Prevents the boiler from overheating  
 Four rubber feet: Ensure the stand does not slip

## Weight and dimensions

Weight (incl. packaging): 5.25 kg  
 Pallet: 40 pcs  
 Dimensions: 319 x 199 x 166 mm

## Smooth gliding

Coated soleplate for superb gliding

## Easy set up and storage

Cord and hose storage: Integrated cord & hose storage space  
 Compact design: Compact design makes it easy to store and handle

## Technical specifications

Voltage: 230 V  
 Frequency: 50-60 Hz  
 Boiler wattage: 1370 W  
 Iron wattage: 800 W  
 Start-up time: 6 minute(s)  
 Boiler capacity: 800 ml

## Full control

Iron temperature ready light

## Longer lifetime

Inox boiler with external heating element:  
 Anti-corrosion steam chamber  
 Calc-Clean: Simply rinse the boiler every 10 ironing sessions

## Easily removes creases

Continuous vertical steam: For hanging fabrics  
 Optimal vent pattern: For the best steam distribution

## Reaches into tricky areas

Button groove: Speeds up ironing along buttons and seams  
 Steam tip: Lets you iron right into hard-to-reach areas

## Fast and powerful ironing

Continuous steam: up to 90 g/min  
 Steam pressure: Up to 4 bars

