




Saeco GranBaristo Super-automatic espresso machine

- Brews 18 coffee varieties
- Integrated milk jug & frother
- Steel Black
- 5 step adjustable grinder

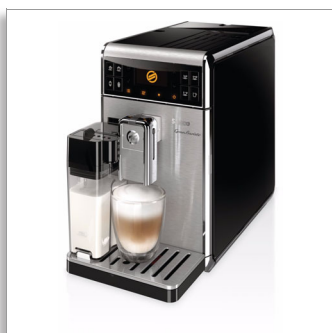

HD8966/47

Enjoy a unique variety of 18 one touch specialties

With the first one-finger removable brewing group

After 28 years Saeco has re-invented the bean-to-cup experience, crafting the new GranBaristo. A sleek espresso machine with a set of revolutionary technologies that brews quicker, hotter, offers more variety and streamlines maintenance

Advanced technology designed for coffee perfection

- Fine-tune the coffee's richness with 5 grinder settings
- 20,000 cups of finest coffee with durable ceramic grinders
- A hot coffee in no time thanks to the Thermospeed technology
- Variable brewing pressure for classic coffee and espresso

A variety of coffees customized to your taste

- Save your favorite coffee with 6 user profiles

High comfort is part of the experience

- One-finger removable brewing group for an effortless clean


Ease of cleaning and maintaining

- No-fuss coffee experience thanks to low water consumption
- Easy cleaning thanks to dishwasher-safe parts
- Always a clean machine thanks to auto-clean and descaling

 **Saeco**

PHILIPS

Saeco, a Philips brand



Super-automatic espresso machine
Brews 18 coffee varieties Integrated milk jug & frother, Steel Black, 5 step adjustable grinder

HD8966/47

Highlights

Dishwasher-safe parts



For your convenience, you can put the Saeco's drip tray and milk frother or milk carafe in the dishwasher. This will save time and ensure a hygienic cleaning.

No-fuss coffee experience



This new cutting-edge brewing group in this espresso machine was designed to reduce water consumption for its rinse cycle by up to 80%. This means you can now prepare more coffee drinks without having to refill the water tank.

Auto cleaning and descaling



Saeco designed this espresso machine to automatically clean its coffee circuit with water upon starting up or switching off of the machine, this delivers a great, fresh taste with each cup of coffee. Regular descaling prolongs your espresso machine's life. This machine will not only prompt when descaling is needed, the automated descaling process will start on your machine and guides you with clear on-screen messages when you have to intervene. Descaling has never been so easy!

5-steps adjustable grinders



When it comes to the fineness of the grind, this machine never fails to satisfy. Different coffee blends require different levels of granularity for the full flavor to unfold. So the grind granularity

of this machine has five adjustable settings - from the finest grind for a full-bodied espresso, to the coarsest for a lighter coffee.

100% Ceramic grinders



Our grinders are made of high-tech ceramic: exceptionally hard and precise. Fresh beans are gently ground, without risk of overheating: extracting all the best flavors and aroma, delivering a superior coffee taste for at least 20,000 cups.

A hot coffee in no time



Enjoy perfectly hot, coffee without the wait, thanks to the powerful boiler with Saeco Thermospeed technology. The Thermospeed technology will flash-heat the coffee circuit when the machine is turned on and prevents the loss of heat ensuring perfect, hot coffee from the very first cup.

Super-automatic espresso machine

Brews 18 coffee varieties Integrated milk jug & frother, Steel Black, 5 step adjustable grinder

HD8966/47

Specifications

Sustainability

- Power consumption brewing: 1900 W

General specifications

- Cups at the same time: 2
- Suitable for: Whole coffee beans, ground coffee powder
- Type of carafe: Basic carafe
- Type of boiler: Thermospeed
- Type of display: LCD
- Special functions: Ceramic grinder, Integrated carafe, Pre-brewing, Ground coffee option, VariPresso brewing group
- Customizing per drink: Adjustable coffee strength, Adjustable temperature, Adjustable cup volume, Adjustable milk foam amount
- Ease of use and comfort: Removable water tank, Display, Removable spout
- Ease of cleaning & maintenance: Automatic de-scaling cycle, Removable brewing group, Automatic carafe cleaning
- Coffee drinks: Espresso, Cappuccino, hot water, Café Crème, frothed milk, Espresso Macchiato, Latte Macchiato, coffee, Ristretto, Americano, Café au lait

Finishing

- Material boiler: Stainless steel (Inox)
- Material drip tray: Stainless steel

- Material of main body: Stainless steel & plastic
- Material water tank: Plastic

Country of origin

- Made in: Italy

Service

- 1-year guarantee

Technical specifications

- Pump pressure: 15 bar
- Capacity milk carafe: 500 L
- Capacity bean container: 270 gr
- Capacity waste container: 20 servings
- Max. cup height: 75 - 165 mm
- Water boilers: 1
- Cord length: 0.8 m
- Capacity water tank: 1.7 L
- Frequency: 60 Hz
- Voltage: 120 V

Weight and dimensions

- Weight of product: 13 kg
- Dimensions of product (WxDxH): 205 x 460 x 360 mm

Design

- Color: Stainless steel & black

Issue date 2019-11-22

© 2019 Koninklijke Philips N.V.
All Rights reserved.

Version: 4.0.1

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

EAN: 00 07502 00392 93

www.philips.com