

# PHILIPS

## Steam iron

### Azur

Steam 45g/min; 200g steam boost

SteamGlide soleplate

Safety Auto Off

2400 Watts



GC4865/02



## Designed for perfection

This new Azur comes with an optimal design and weight to maneuver the iron easily over the garment, even into the hard to reach areas. Together with its powerful steam performance it gives you all you need for perfect results.

#### **Easily removes creases**

- 2400 W for quick heat up
- Steam output of up to 45 g/min for better crease removal
- 200 g steam boost for the most stubborn creases

#### **Easy gliding on all fabrics**

- SteamGlide soleplate is Philips premium soleplate

#### **Safe ironing**


- Automatically turned off for safety and energy saving

#### **Designed for perfect results**

- Optimal design to manoeuvre the iron easily over the garment
- Lightweight to move the iron easily on and off the board
- Steam tip allows you to have steam in hard-to-reach areas
- Sideways opening filling door


# Highlights

## Steam tip

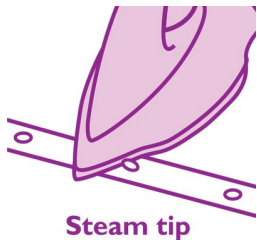


The unique steam tip of this Philips iron, combines a particularly pointed front of the soleplate with special elongated steam slots in the tip, to reach right into the smallest and most difficult areas for the best ironing results.

## Easy to handle

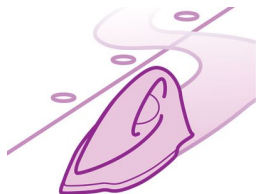

The Philips steam iron is designed to manoeuvre it easily over the garment and enabling you to reach easily even the hardest to reach areas.

## Lightweight iron

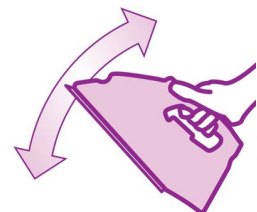

The iron has an optimal weight of 1.6kg making it easy to constantly place the iron on the board and back to its heelrest.

## 2400 W for quick heat up

**2400W**  
max

2400 W for quick heat up and powerful performance

## Safety auto off

**Safety  
auto  
off**

The safety auto off function automatically switches off the appliance if it has not been used for 5 minutes, to save energy.

## 200 g steam boost



Applying the steam boost will release a steam shot up to 200 g to remove even the toughest creases

## Steam up to 45 g/min



Continuous steam output of up to 45 g/min gives you the perfect amount of steam to efficiently remove all creases.

## SteamGlide soleplate



SteamGlide soleplate is the best Philips soleplate for your steam iron. It has great scratch resistancy, glides excellent and is easy to clean.

## Easy filling



Sideways opening filling door

# Specifications

## Fast & powerful crease removal

Soleplate: SteamGlide

Continuous steam output: 45 g/min

Steam boost: 200 g

Vertical steaming

Variable steam settings

Spray

Steam tip

Power: 2400 W

## Comfortable ironing

Cord length: 2.5 m

## Easy to use

Water tank capacity: 350 ml

Drip stop

Safety auto off

Cord storage: Cord clip

Power cord length: 2.5 m

Fast and easy filling

## Calc management

Calc clean solution: Double active calc clean

## Technical specifications

Weight of iron: 1.6 kg

Voltage: 220 - 240 V

