

# PHILIPS

Steam generator  
iron

PerfectCare Aqua  
Pro

Max 6.7-bar pressure

Up to 450 g steam boost

2.5-l water tank capacity

Ultra-light iron

GC9410/60



## Super-powerful ironing

with ultra-light iron

PerfectCare Aqua Pro comes with our ultra-light iron and extra-large 2.5-l water tank — ideal for long ironing sessions and perfect vertical steaming.

### **No temperature setting needed; no burning, guaranteed**

- Go from ironing jeans to silk; no need to change temperature setting
- Safe to leave the hot soleplate on the ironing board

### **Fast ironing with continuous powerful steam**

- Powerful steam for ultimate crease removal
- Easy and efficient descaling system
- Philips' best gliding and most scratch-resistant soleplate
- Save energy with ECO mode

### **Ultimate ironing experience**

- Enjoy powerful ironing with minimum noise
- Lightweight and comfortable to handle
- Extra-large water tank for longer continuous use
- Safe and secure carry lock
- Automatic switch-off for safety and energy saving



[asimpleswitch.com](http://asimpleswitch.com)

# Highlights

## 2.5-l water tank




The water tank has an extra-large 2.5-l capacity, so you get the convenience of up to 3 hours of continuous use with no need to top up the tank. It's also transparent, so you can get a 360° view of the tank to easily see how much water you have left to continue creating steam efficiently. When you do need to refill, your steam generator iron has a large filling hole that allows you to easily fill the water tank under the tap, or alternatively with a jug or bottle at any time during ironing.

## Easy De-calc



Regular descaling protects your iron and ensures you'll continue to get the very best steam performance. The exclusively designed and ideally positioned Easy De-Calc Plus function provides the ideal way to get rid of limescale and extend the lifespan of your steam generator iron. The iron will remind you with both light and sound when it's time to clean and descale. Then when your appliance is cold, simply remove the Easy De-Calc knob, collect the dirty water and scale into a cup and discard.

## Energy saving

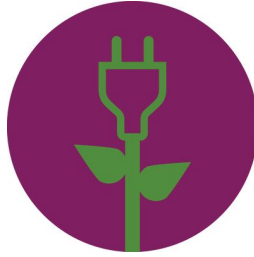

ECO mode allows you to save energy without compromising your ironing results. The ECO mode uses a reduced amount of steam, but still a sufficient amount to iron all your garments.

## OptimalTEMP technology



With OptimalTEMP technology you'll no longer have to waste time changing temperature settings, waiting for the temperature to adjust or pre-sorting clothes. Iron all fabrics, from jeans to silk, with no burning guaranteed thanks to the perfect combination of temperature and continuous powerful steam.

## Safe carry lock



Your steam generator iron includes a safe carry lock, which securely fastens your iron to its base without the risk of it slipping or someone touching the hot soleplate. It ensures safe and easy transportation around the house, to and from storage.

## Safe rest



Innovative OptimalTEMP technology guarantees no burning on any ironable fabric. As well as the reassurance this provides whilst ironing, it also means you can leave the hot iron soleplate directly on your cotton ironing board without causing any damage. This helps to reduce any discomfort to your wrists, as you won't need to lift the iron to and from its base as often.

## Safety auto off



The safety auto-off function automatically switches off your steam generator iron if it has not been used for a few minutes. This saves energy and gives you peace of mind about safety.



[asimpleswitch.com](https://www.asimpleswitch.com)

## Philips Green Logo

Philips Green Products can reduce costs, energy consumption and CO2 emissions. How? They offer a significant environmental improvement in one or more of the Philips Green Focal Areas — Energy efficiency, Packaging, Hazardous substances, Weight, Recycling and disposal and Lifetime reliability.

# Specifications

## Technology

For all ironable fabrics  
No burns  
No temperature settings needed  
OptimalTEMP technology  
Silent steam technology  
Cyclonic steam chamber  
Smart Control Processor

## Easy to use

Safe on all ironable fabrics: Even delicates like silk  
Soleplate name: T-ionicGlide  
Water tank capacity: 2500 ml  
Power cord length: 1.8 m  
Refill anytime during use  
Safety auto off  
Tap water suitable  
Soleplate scratch resistance: 5 stars  
Cord freedom (swivel): 360 degree cord freedom  
Extra-large filling hole

Heat-up time: 2 min  
Hose length: 1.7 m  
Precision steam tip  
Ready to use: Light indicator  
Soleplate gliding performance: 5 stars

## Scale management

Descaling and cleaning: Easy De-calc  
Descaling reminder: Light, Yes

## Storage

Carry lock: For transportation and safety  
Cord storage: Velcro fix  
Hose storage: Hose storage compartment

## Size and weight

Product dimensions (W x H x D): 36.2 x 27 x 26.3 cm  
Weight of iron: 0.8 kg  
Weight of iron + base: 4.2 kg

## Guarantee

2 year worldwide guarantee

## Green efficiency

Product packaging: 100% recyclable  
User manual: 100% recycled paper  
Energy saving mode

## Fast crease removal

Continuous steam: Up to 120 g/min  
Power: Max 2100 W  
Pressure: Max 6.7 bar  
Ready to use: 2 min  
Steam boost: Up to 450 g  
Steam-on-demand  
Variable steam levels  
Vertical steam  
Voltage: 220 - 240 V

