

PHILIPS

Vacuum cleaner
with bag

HomeHero

2000W

AirflowMax technology

Parquet



FC8915



Live life!

Vacuum cleaner for easy cleaning

Get the job done quickly and easily with Philips HomeHero vacuum cleaner. This cleaner delivers great suction power, dust filtration, and flexible nozzles for thorough cleaning without the hassle.

High cleaning power

- 2000 Watt motor generating max. 375 Watt suction power

Highly efficient anti-allergy system

- EPA AirSeal plus EPA 12 filter

Easy to use all over the house

- Two comfortable carrying handles for extra convenience

Scratch-protection for parquet floors


- Parquet nozzle with soft brush hairs for scratch-protection

Hygienic disposal of dust bag

- Unique Clean Comfort Cassette to avoid contact with dust

Highlights

2000 Watt motor

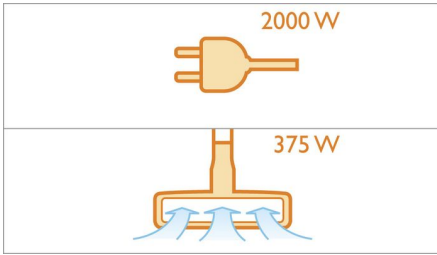


This powerful 2000 Watt motor generates max. 375 Watt suction power for excellent cleaning results.

EPA AirSeal, EPA 12 filter



This vacuum cleaner has been designed in such a way that all the air taken in is passed through the EPA 12 filter (99.5% filtration) before it is exhausted. No escape is possible.


Comfortable carrying handles

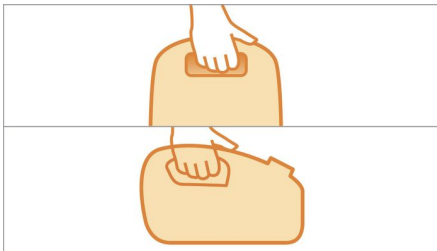

This vacuum cleaner has not one, but two carrying handles. When it is on its wheels, there is a handle on top which enables you to


easily move the cleaner around with very little bending. The second handle on the front side of the appliance enables you to comfortably carry it around in an upright position.

Parquet nozzle

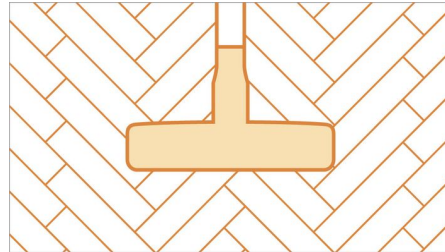

No more risk of scratches thanks to this nozzle with soft brush hairs, especially designed to carefully clean your hard floors.

Clean Comfort Cassette

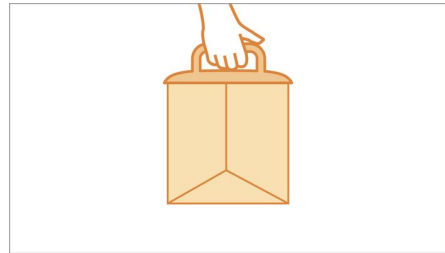

When disposing the dust bag of your Philips vacuum cleaner, there will be no contact with the dust thanks to this patented dust bag holder.

Specifications

Design

Color: Dark midnight blue

Filtration

Dust bag type: s-bag
Exhaust filter: Super Clean Air HEPA 12 washable filter
Dust capacity: 3 L
HEPA Air Seal

Nozzles and accessories

Accessories included: Crevice tool
Accessory storage: On tubeclip
Additional nozzle: Parquet nozzle
Standard nozzle: Wheeled all-purpose nozzle

Performance

Airflow (max): 42 l/s
Input power (IEC): 1800 W
Input power (max): 2000 W
Noise level (Lc IEC): 79 dB
Suction power (max): 375 W
Vacuum (max): 32 kPa

Sustainability

Packaging: > 90% recycled materials
User manual: 100% recycled paper

Usability

Carrying handle: Top and front
Clean Comfort cassette
Tube coupling: Button
Dust full indicator
Power control: Electronic on appliance
Tube type: Metal 2-piece telescopic tube
Wheel type: Rubber
Action radius: 10 m
Cord length: 7 m

Weight and dimensions

Weight of product: 5.5 kg

