

# PHILIPS

Bagless vacuum cleaner

PowerPro Active

2000W

PowerCyclone 4

HEPA 10 washable filter

FC8631/61



## Always the highest suction power\*

### With PowerCyclone 4 Technology

The new Philips PowerPro Active delivers outstanding cleaning results thanks to the PowerCyclone 4 technology. The advance dust container is easy to empty and helps avoiding dust clouds.

#### **Powerful cleaning performance**

- PowerCyclone 4 technology separates dust and air in one go
- 2000 Watt motor for high performance

#### **Clean air in your home**

- The EPA filter catches microscopic vermin causing allergy

#### **Easy to clean**

- Advanced dust container design for easy to emptying

#### **Ergonomic grip for far reach**

- Reach all corners thanks to the extra long ergonomic grip

# Highlights

## PowerCyclone 4 Technology



PowerCyclone 4 technology maximizes airflow and performance by separating dirt from air in one go. It delivers remarkable cleaning results through highly efficient steps: 1) Air enters fast into the PowerCyclone thanks to the straight and smooth air inlet. 2) The curved airpass quickly accelerates the air upwards in the cyclonic chamber to separate the dust from the air.

## 2000 Watt motor



The 2000 Watt motor generates max. 370 Watt suction power for high performance.

## EPA filter system


The pleated EPA filter has a large filter surface and good filtration performance. In combination with the cyclonic airflow, this prevents it from clogging fast and gives you better and longer-lasting filtration results.

## Easy to empty dust container



The dust container is perfectly designed to dispose dust without creating a dust cloud. Thanks to its unique shape and smooth surface, dust is collected at one side of the container and evenly glides into the dust bin.

## Extra long ergonomic grip

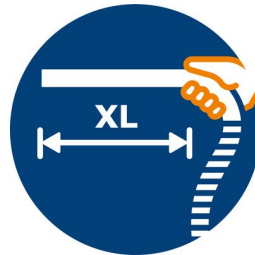

This ergonomically shaped grip is convenient in use. Its extra long design gives you farther reach, so you can easily clean hard to reach places.

# Specifications

## Design

**Color:** Deep black

## Performance

**Input power (max):** 2000 W  
**Input power (IEC):** 1800 W  
**Suction power (max):** 370 W  
**Vacuum (max):** 30 kPa  
**Airflow (max):** 35 l/s  
**Noise level (Lc IEC):** 80 dB

## Filtration

**Dust capacity:** 1.7 L  
**Exhaust filter:** Microfilter  
**Motor filter:** EPA 10 washable filter

## Usability

**Action radius:** 9 m  
**Cord length:** 6 m  
**Tube type:** Aluminum telescopic tube  
**Carrying handle:** Top and front  
**Tube coupling:** Conical  
**Wheel type:** Rubber  
**Power control:** Electronic on appliance

## Nozzles and accessories

**Standard nozzle:** Multi-purpose nozzle  
**Accessories included:** Crevice tool, Small nozzle  
**Accessory storage:** On tubeclip

## Sustainability

**Packaging:** > 90% recycled materials  
**User manual:** 100% recycled paper

## Weight and dimensions

**Weight of product:** 6 kg  
**Dimensions of product (LxWxH):** 473x304x301 mm

