

# PHILIPS

## Steam iron

### EasySpeed

Steam 25g/min; 100g steam boost

2000W

Safety Auto Off

GC1029/90



## Fast, from start to finish

### 3 ways to speed up your ironing

This EasySpeed iron speeds up your ironing thanks to: triple precision tip, even heat distribution across the soleplate and continuous steam.

#### Comfortable ironing

- A fine spray evenly moistens the fabric
- Drip-stop system keeps your garments spotless while ironing
- Even steam distribution for efficient ironing
- Triple precision tip for optimal control and visibility
- Iron switches off automatically when left unattended

#### Longer lifetime

- Calc clean slider to easily remove scale out of your iron

#### Easily removes creases

- 100 g steam boost to remove stubborn creases easily
- Vertical steam for crease removal in hanging fabrics
- Continuous steam up to 25g/min for good crease removal
- Ceramic soleplate for better gliding performance
- Power up to 2000 W enabling constant high steam output

# Highlights

## Steam boost up to 100 g



Steam boost up to 100g for fast removal of even the most stubborn creases.

## Spray



The spray function produces a fine mist that evenly moistens the fabric, making it easier to iron out creases.

## Calc clean slider



This steam iron can be operated with normal tap water and the calc clean slider makes it easy to remove any built-up scale out of your iron. To maintain the performance of your Philips steam iron, you should use this scale clean function once a month when using normal tap water.

## Ceramic soleplate



Ceramic soleplate is scratch resistant, glides well and easy to clean.

## Vertical steam



This Philips iron has a vertical steam function, for crease removal in hanging fabrics.

## Continuous steam up to 25g/min



Continuous steam up to 25g/min for good crease removal.

## Drip stop system




Drip Stop system lets you iron delicate fabrics at low temperatures without having to worry about stains from water droplets.

## Even steam distribution

Thanks to the carefully crafted soleplate design, the steam is distributed evenly across the soleplate. This way you need less strokes to evenly moisten the garment and therefore less time to complete the ironing.

## Triple precision tip

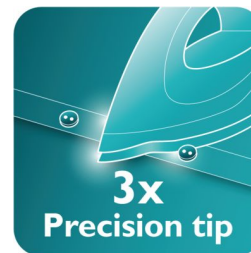

The tip of this Philips iron is precise in 3 ways: it has a pointed tip, button groove and a sleek design of the nose. Triple Precision tip enables you to reach even into the most tricky areas, e.g. around the buttons or between the pleats.

## Automatic shut-off



The iron shuts off automatically when left unattended. If it is left on it's heelrest it will switch off in 8 minutes. When left on the soleplate or on the side, it only takes 30 seconds before the iron shuts off.

## Power up to 2000 W



Power up to 2000 W enables constant high steam output.

# Specifications

## Calc management

Calc clean solution: Self clean

## Easy to use

Drip stop

Safety auto off

Water tank capacity: 200 ml

## Fast & powerful crease removal

Continuous steam output: 25 g/min

Power: 2000 W

Soleplate: Ceramic

Spray

Steam boost: 100 g

Vertical steaming

