

PHILIPS

Steam generator
iron

PerfectCare Elite

Max. 7.5 bar pressure

Up to 500 g steam boost

1.8 l water tank capacity

Detachable water tank



GC9650/80



The most powerful steam for the fastest ironing* with ultra-light iron

PerfectCare Elite is Philips' best and most efficient steam generator iron. With OptimalTEMP technology, you can now iron everything from jeans to silk with no temperature setting needed. Guaranteed no burns on all ironable garments.

No temperature setting needed; no burning, guaranteed

- Go from ironing jeans to silk; no need to change temperature setting
- Safe to leave the hot soleplate on the ironing board

Fast ironing with continuous powerful steam

- Powerful steam for ultimate crease removal
- Easy and efficient descaling system
- Philips' best gliding and most scratch-resistant soleplate
- Save energy with ECO mode

Ultimate ironing experience

- Lightweight and comfortable to handle
- Large detachable water tank for easy refilling
- Safe and secure carry lock
- Automatic switch-off for safety and energy saving



asimpleswitch.com


Highlights

1.8 l detachable water tank




The detachable water tank allows you to easily refill anytime without stopping the appliance. It has a large filling hole so you can simply fill the water tank under the tap. It has a 1.8 l capacity, so you get the convenience of up to 2 hours of continuous use, with no need to top up the tank.

Energy saving

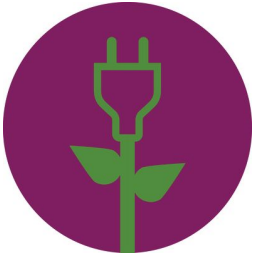

ECO mode allows you to save energy without compromising your ironing results. The ECO mode uses a reduced amount of steam, but still a sufficient amount to iron all your garments.

OptimalTEMP technology

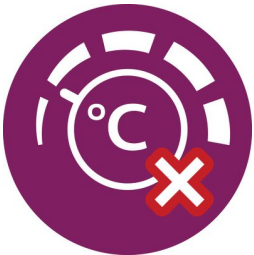

With OptimalTEMP technology you'll no longer have to waste time changing temperature settings, waiting for the temperature to adjust or pre-sorting clothes. Iron all fabrics, from jeans to silk, with no burning guaranteed thanks to the perfect combination of temperature and continuous powerful steam.

Safe carry lock



Your steam generator iron includes a safe carry lock, which securely fastens your iron to its base without the risk of it slipping or someone touching the hot soleplate. It ensures safe and easy transportation around the house, to and from storage.

Safe rest



Innovative OptimalTEMP technology guarantees no burning on any ironable fabric. As well as the reassurance this provides whilst ironing, it also means you can leave the hot iron soleplate directly on your cotton ironing board without causing any damage. This helps to reduce any discomfort to your wrists, as you won't need to lift the iron to and from its base as often.

Safety auto off



The safety auto-off function automatically switches off your steam generator iron if it has not been used for a few minutes. This saves energy and gives you peace of mind about safety.

T-ionicGlide soleplate



The T-ionic Glide is Philips' most premium soleplate, promising superior gliding for faster, effortless ironing. It has a stainless steel base which is harder and more durable than aluminium, with an integrated titanium oxide layer for advanced scratch resistance. Plus the carefully designed shape and vents provide even better steam distribution for faster crease removal.

Ultra-powerful steam



An ultra-fast ironing experience can be yours with revolutionary technology. The powerful and continuous steam tackles even tough creases, and thicker fabrics are smoothed out with ease and speed. Plus there's an extra steam boost if needed, perfect for vertical steaming or stubborn creases.



[asimpleswitch.com](https://www.asimpleswitch.com)

Philips Green Logo

Philips Green Products can reduce costs, energy consumption and CO2 emissions. How? They offer a significant environmental improvement in one or more of the Philips Green Focal Areas — Energy efficiency, Packaging, Hazardous substances, Weight, Recycling and disposal and Lifetime reliability.

Specifications

Easy to use

Detachable water tank
Extra-large filling hole
Heat-up time: 2 min
Hose length: 1.9 m
Low water alert
Power cord length: 2 m
Precision steam tip
Ready to use: Light indicator, Sound indicator
Refill anytime during use
Safe on all ironable fabrics: Even delicates like silk
Safety auto off
Soleplate gliding performance: 5 stars
Soleplate name: T-ionicGlide
Soleplate scratch resistance: 5 stars
Tap water suitable
Water tank capacity: 1800 ml

Fast crease removal

Continuous steam: Up to 150 g/min
Power: Max 2400 W
Pressure: Max. 7.5 bar

Ready to use: 2 min
Steam boost: Up to 500 g
Steam-on-demand
Variable steam levels
Vertical steam
Voltage: 220 - 240 V

Green efficiency

Energy saving mode
Product packaging: 100% recyclable
User manual: 100% recycled paper

Guarantee

2 year worldwide guarantee

Scale management

Descaling and cleaning: Easy De-calc Plus
Descaling reminder: Light, Yes

Size and weight

Packaging dimensions (W x H x D): 31 x 35 x 51 cm
Product dimensions (W x H x D): 23.3 x 28.5 x

45.3 cm
Weight of iron: 0.8 kg
Weight of iron + base: 5.1 kg

Storage

Carry lock: For transportation and safety
Cord storage: Cord storage compartment, Velcro fix
Hose storage: Hose storage compartment

Technology

Cyclonic steam chamber
For all ironable fabrics
No burns
No temperature settings needed
OptimalTEMP technology
Smart Control Processor
Silent steam technology

Accessories included

Glove for extra protection

