

# PHILIPS

Steam generator  
iron

SpeedCare

Max 4.2 bar pump pressure

1.2 L fixed watertank

GC6611



## Ironing faster with 2 x more steam\*\*

Philips SpeedCare steam generator delivers more steam than a steam iron, it helps you speed up ironing. Enjoy more quality time of the reduced ironing time with your loved family by using Philips SpeedCare steam generator iron.

### Fast and powerful ironing

- Max 4.2 bars pump pressure
- Tap water friendly, refill anytime during ironing
- Steam boost up to 120 g
- Ready to use in 2 minutes with unlimited refill
- Triple precision tip for optimal control and visibility
- Non-stick soleplate coating
- Smart Calc clean system with sound&light Calc Clean reminder
- 1.2 L water tank and refill anytime during ironing
- Compact size and light weight for easy storage

# Highlights

## Steam ready in 2 minutes




Steam is ready to use in 2min and can be refilled at anytime during ironing.

## 1.2 L water tank



SpeedCare steam generator has 1.2 L water tank capacity to allow your iron more than 1 hour, it helps you reduce the frequency of refilling everytime for the big laundry loads. The technology will also allow you refill the water tank during ironing without cooling down the appliance for 2 hours waiting to reill.

## Triple precision tip

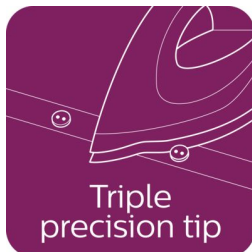

The tip of this Philips iron is precise in 3 ways: it has a pointed tip, button groove and a sleek design of the nose. Triple Precision tip enables you to reach even into the most tricky areas, e.g. around the buttons or between the pleats.

## Non-stick soleplate



The soleplate of your Philips iron is coated with a special non-stick layer for good gliding performance on all fabrics.

## Compact size and light weight



Thanks to the revolutionnary ProVelocity technology, we made your steam generator iron more compact than ever before. The compact steam generator fits easily on your ironing board making your ironing more convenient. In addition, your steam generator takes much less storage space.

## Smart Calc Clean system



Smart Calc Clean system is an intergrated descaling and cleaning fuction to protect your steam generator iron. After each about 10 hour ironing, you will be reminded by the soud and light of your steam genreator iron to perform

calc clean process. The Calc Clean Container will provide you the convenience during the Calc Clean process, by just resting your iron on the container without holding your iron to stress your waist. After cleaning process, all the dirty water is collected in the container, your steam generator iron is ready to use again.

## Max 4.2 bars pump pressure



The more steam, the faster the ironing. Consistent powerful steam is generated which penetrates deep inside the garments making ironing faster and better. Steam power can be regulated to fit your needs.

## Refill tap water any time



Your steam generator iron is designed to use tap water. While ironing, when you run out of water in the watertank, you can refill it easily without waiting or turning your appliance off.

## Steam boost up to 120 g

The steam boost can be used for vertical steaming and tough creases.

# Specifications

## Calc management

Suitable for tap water  
Calc clean solution: Smart Calc Clean  
Calc clean reminder  
Filtered water recommended

## Easy to use

Water tank capacity: 1200 ml  
Filling and emptying water: Extra large filling hole  
Refill any time  
Heat up time: 2 min  
Hose storage: Hose storage compartment

Cord freedom (swivel): 180 degree cord freedom

Hose length: 1.6 m  
Power cord length: 1.8 m

## Fast & powerful crease removal

Vertical steaming  
Pressure: Max 4.2 bar pump pressure  
Power: 2400 W  
Continuous steam output: 95 g/min  
Steam boost: 120 g

## Weight and dimensions

Packaging dimensions (WxHxL): 26.4 x 30.3 x 40.4 cm  
Product dimensions (WxHxL): 19.8 x 21.7 x 34.6 cm  
Weight of iron: 1.1 kg  
Weight of iron + base: 2.6 kg

## Service

2-year worldwide guarantee

