

PHILIPS

Bagless vacuum cleaner

PowerPro Active

PowerCyclone 4 technology

TriActive+ nozzle

FC9521/09



Full performance

Less energy consumption

The new Philips PowerPro Active delivers full cleaning performance thanks to the PowerCyclone 4 technology and the TriActive+ nozzle, engineered for high dust removal. The dust bucket is easy to empty, with no dust clouds.

Remarkable cleaning results

- A-class performance on hard floors
- New 3-in-1 TriActive+ nozzle picks up coarse and fine dust
- PowerCyclone 4 technology separates dust and air in one go

Extreme Convenience

- Advanced dust container design for easy to emptying
- Variable power setting
- Reach all corners thanks to the extra long ergonomic grip

Clean air filter system

- EPA10 filter system with AirSeal for healthy air

B

Highlights

A-class on hard floors



This product achieves the highest cleaning performance class on hard floors. 100% of dust is picked up!

PowerCyclone 4 Technology




PowerCyclone 4 technology maximizes airflow and performance by separating dirt from air in one go. It delivers remarkable cleaning results through highly efficient steps: 1) Air enters fast into the PowerCyclone thanks to the straight and smooth air inlet. 2) The curved airpass quickly accelerates the air upwards in the cyclonic chamber to separate the dust from the air.

TriActive+ nozzle



The TriActive+ nozzle applies 3 cleaning actions in one go: 1) It gently opens the carpet with its specially designed soleplate to remove the dust deep down. 2) It sucks up big bits with its larger opening at the front. 3) It sweeps up the dust and dirt alongside furniture and walls with its two side brushes.

Power control

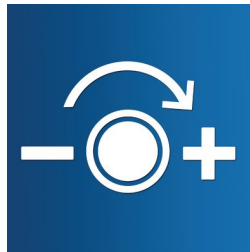

The variable power setting allows you to select the optimal level of suction for the different types of surfaces you vacuum.

Easy to empty dust container



The dust container is perfectly designed to dispose dust without creating a dust cloud. Thanks to its unique shape and smooth surface, dust is collected at one side of the container and evenly glides into the dust bin.

Extra long ergonomic grip



This ergonomically shaped grip is convenient in use. Its extra long design gives you farther reach, so you can easily clean hard to reach places.

EPA10 Clean air system



EPA10 filter and AirSeal capture the finest dust before the air is blown out for a dust-free environment and clean, healthy air.

Specifications

Performance

Annual energy consumption: 33,6 kW·h

Sound power level: 78 dB

Input power (IEC): 750 W

Airflow (max): 27,8 l/s

Vacuum (max): 16,8 kPa

Design

Color: Full red

Filtration

Dust capacity: 1.7 L

Exhaust filter: Microfilter

Motor filter: EPA 10 washable filter

Usability

Action radius: 9 m

Cord length: 6 m

Power control: Electronic on appliance

Tube type: Metal 2-piece telescopic tube

Tube coupling: Conical

Wheel type: Rubber

Carrying handle: Top and front

Nozzles and accessories

Standard nozzle: TriActive+ nozzle

Accessories included: Crevice tool, Small nozzle

Accessory storage: On tubeclip

Additional nozzle: Hard floor nozzle

Weight and dimensions

Weight of product: 6 kg

Dimensions of product (LxWxH): 473 x 304 x 301 mm

Sustainability

Packaging: > 90% recycled materials

User manual: 100% recycled paper

