

PHILIPS

Steam generator
iron

Perfect Care Aqua
Pro

Max 7 bar pressure

Up to 450g steam boost

2.5 L water tank capacity

Ultra-light iron



GC9330/20



Super powerful ironing with Ultra-light iron

PerfectCare Aqua Pro comes with our ultra-light iron and extra large 2.5 L watertank, ideal for long ironing sessions and perfect vertical steaming.

No temperature setting needed, guaranteed no burn

- Iron jeans to silk, no need to change temperature setting
- Safe to leave the hot soleplate on the ironing board

Fast ironing with continuous powerful steam

- Powerful steam for ultimate crease removal
- Easy and efficient descaling system
- Philips best gliding and most scratch resistant soleplate
- Save energy with ECO mode

Ultimate ironing experience

- Light weight and comfortable to handle
- Extra-large water tank for longer continuous use
- Safe and secure carry lock
- Automatic switch off for safety and energy saving


Highlights

Ultra powerful steam



An ultra-fast ironing experience can be yours with revolutionary technology. The powerful and continuous steam tackles even rough creases, and thicker fabrics are smoothed out with ease and speed. Plus there's an extra steam boost if needed, perfect for vertical steaming or stubborn creases.

OptimalTEMP technology

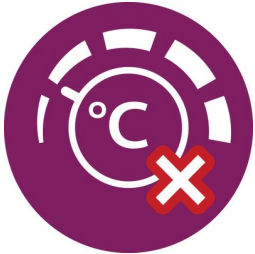

With OptimalTEMP technology you'll no longer have to waste time changing temperature settings, waiting for the temperature to adjust or pre-sorting clothes. Iron fabrics from jeans to silk, with guaranteed no burns thanks to the perfect combination of temperature and continuous powerful steam.

Safe rest



Innovative OptimalTEMP technology guarantees no burn on all ironable fabrics. As well as the reassurance this provides whilst

ironing, it also means you can leave the hot iron soleplate directly on your cotton ironing board without causing any damage. This helps to reduce any discomfort to your wrists, as you won't need to lift the iron to and from its base as often.

Ultra-lightweight iron



Your steam generator's iron has the ideal weight: amazingly light weight and comfortable to handle. It glides easily over your garments, removes the toughest creases in no time, and reduces stress on your wrist. It makes also vertical steaming very easy and effective. You can now comfortably & effectively remove the creases of your delicate, like silk blouse, dresses, and jackets and even difficult to iron garments with pleats, decorations, buttons etc in a vertical way.

2.5 L water tank



The water tank has an extra-large 2.5 L capacity, so you get the convenience of up to 3 hours of continuous use, with no need to top-up the tank. It's also transparent, so you can get a 360° view of the tank to easily see how much water you have left to continue creating steam efficiently. When you do need to refill, your steam generator iron has a large filling

hole that allows you to easily fill the water tank under the tap, or alternatively with a jug or bottle at any time during ironing

Easy De-Calc



Regular descaling protects your iron and ensures you'll continue to get the very best steam performance. The exclusively designed and ideally positioned Easy De-Calc Plus function provides the ideal way to get rid of lime scale and extend the lifespan of your steam generator iron. The iron will remind you with both light and sound when it's time to clean and descale. Then when your appliance is cold, simply remove the Easy De-Calc knob, collect the dirty water and scale into a cup and discard.

T-ionicGlide soleplate



The T-ionic Glide is Philips' most premium soleplate, promising superior gliding for more effortless and fast ironing. It has a stainless steel base which is harder and more durable than aluminum, with an integrated titanium oxide layer for advanced scratch resistance. Plus the carefully designed shape and vents provide an even better steam distribution for faster crease removal.

Specifications

Technology

Cyclonic steam chamber
For all ironable fabrics
No burns
No temperature settings needed
OptimalTEMP technology
Smart Control Processor

Fast crease removal

Continuous steam: Up to 120 g/min
Power: Max 2100 W
Pressure: Max 7.0 bar
Ready to use: 2 min
Steam boost: Up to 450 g
Steam-on-demand
Variable steam levels
Vertical steam
Voltage: 220 - 240 V

Easy to use

Safe on all ironable fabrics: Even delicates like silk
Soleplate gliding performance: 5 stars

Soleplate name: T-ionicGlide
Water tank capacity: 2500 ml
Cord freedom (swivel): 360 degree cord freedom
Hose length: 1.7 m
Power cord length: 1.8 m
Precision steam tip
Ready to use: Light indicator
Refill any time during use
Safety auto off
Soleplate scratch resistance: 5 stars
Tap water suitable
Heat up time: 2 min
Extra large filling hole

Scale management

Descaling and cleaning: Easy De-calc
Descaling reminder: Light, Yes

Storage

Carry lock: For transportation and safety
Cord storage: Velcro fix
Hose storage: Hose storage compartment

Size and weight

Product dimensions (WxHxL): 36.2 x 27 x 26.3 cm
Weight of iron: 0.8 kg
Weight of iron + base: 4.2 kg

Guarantee

2 year worldwide guarantee

Green efficiency

Energy saving mode
Product packaging: 100% recycable
User manual: 100% recycled paper

