

# PHILIPS

Bagless vacuum  
cleaner

Marathon

2000W

400W suction power

HEPA 12 filter

AutoClean



FC9222/01



## Performs stronger for longer

### Self-cleaning filter, no bag required

Marathon offers you high cleaning performance thanks to its automatic filter cleaning system.

#### Optimal cleaning power every time

- AutoClean filter optimizes suction power

#### Cleaning perfection

- 2000 Watt motor generating max. 400 Watt suction power


#### Easy cleaning, even around furniture

- TriActive nozzle with unique 3-in-1 action




# Highlights

## AutoClean filter

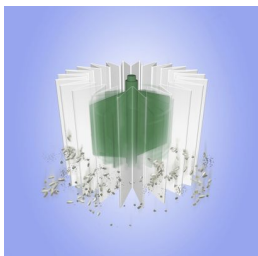

After every cleaning job, a simple push of a button will activate a rattle that thoroughly shakes the dust from the filter pleats into the dust bucket. Now the airflow is no longer blocked by the dust in the filter and suction power is almost like new.

## 2000 Watt motor

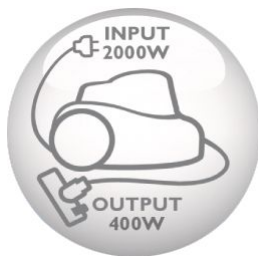

This vacuum cleaner has a 2000 Watt motor generating max. 400 Watt suction power for the ultimate cleaning perfection.

# Specifications

## Design

Color: Pearl silver

## Filtration

Exhaust filter: Super Clean Air HEPA 12 filter

Dust capacity: 1.5 L

## Nozzles and accessories

Accessories included: Crevice tool, Small nozzle

Accessory storage: On handgrip

Standard nozzle: TriActive nozzle

## Performance

Airflow (max): 37 l/s

Input power (IEC): 1800 W

Input power (max): 2000 W

Noise level (Lc IEC): 78 dB

Suction power (max): 400 W

Vacuum (max): 33 kPa

## Usability

Carrying handle: Top and front

Tube coupling: Button

Power control: Electronic on appliance

Tube type: Metal lacquered 2-piece telescopic tube

Wheel type: Rubber

Action radius: 12 m

Cord length: 9 m

## Weight and dimensions

Weight of product: 7.5 kg

