

PHILIPS

Stick vacuum
cleaner

DailyDuo

Cordless 2in1: stick&handheld

Bagless Cyclonic

16.8V battery

2-stage HEPA filtration

FC6161/63



Great performance for your daily cleaning

Cordless 2-in-1 with long lasting suction power

Enjoy a clean feeling every day with Philips DailyDuo. This powerful 2-in-1 stick vacuum cleaner is cordless and helps you to clean both floors and furniture, with high suction power guaranteed. Always around for your quick daily cleaning!

Superior cleaning performance

- Powerful 16.8V batteries ensuring high suction power

Optimal filtration

- 2-stage bagless cyclonic airflow for optimal filtration
- Cyclonic HEPA filter system for longer-lasting filtration

Multifunctional 2-in-1

- 2-in-1 functionality for cleaning both floors and furniture
- QuickDraw release system for easy removal of handheld
- AutoOff charging system guarantees efficient use of energy

Instant parking anywhere

- Self-standing position for instant parking anywhere

Freedom to clean everywhere

- Cordless operation for freedom to clean everywhere

Highlights

Powerful 16.8V batteries



Powerful 16.8V batteries ensuring high suction power

2-stage bagless cyclonic



The bagless cyclonic airflow keeps the dirt inside rotating to ensure optimal, high suction power and lasting cleaning performance. Its 2-stage filtration system ensures that, once inside, the dirt cannot escape. The first filter blocks most dirt, while the second filter traps the finer dust particles.

Cyclonic HEPA filter system



The pleated HEPA filter has a large filter surface and good filtration performance. In combination with the cyclonic airflow, this prevents it from clogging fast and gives you better and longer-lasting filtration results.

2-in-1 functionality




The 2-in-1 functionality gives you both a stick and a handheld vacuum cleaner in one, to easily clean both floor and furniture.

QuickDraw release system



With the QuickDraw release system you can easily remove the handheld from the stick with only one hand, so you can quickly switch between using the stick and the handheld.

AutoOff charging system

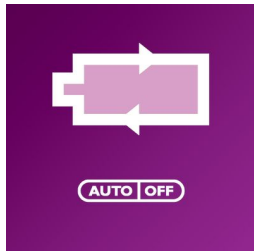

The AutoOff charging system automatically shuts off when the batteries are fully charged, and therefore saves energy that other systems waste.



iF / Product design award 2011

The iF product design award is extremely prestigious, and its significance is recognized throughout the design world and beyond. More than 20 internationally recognized jurors, consisting of designers and entrepreneurs, engage in critical discussion and debate to select the winning products. The DailyDuo was chosen as one of the winning designs, from the 2,756 products that participated in the competition.



iF / Product design award 2011

The iF product design award is extremely prestigious, and its significance is recognized throughout the design world and beyond. More than 20 internationally recognized jurors, consisting of designers and entrepreneurs, engage in critical discussion and debate to select the winning products. The DailyDuo was selected as one of the winning designs, from the 2,756 products that participated in this competition.



red dot design award winner 2011

The red dot is the award for high design quality. Only products that clearly stand out from comparable products due to their outstanding design receive the sought-after quality seal from the international jury.

Specifications

Design

Color: Velvet violet

Design features: Translucent dust chamber

Performance

Battery type: NiMH

Runtime: 20 minute(s)

Noise level (Lc IEC): <84 dB

Airflow (max): 850 l/min

Input power (max): 100 W

Suction power (max): 17 W

Vacuum (max): 4 kPa

Battery voltage: 16.8 V

Charging time: 7 hour(s)

Filtration

Filter system: Cyclonic HEPA filter system

Dust capacity: 0.5 L

Nozzles and accessories

Accessories included: Brush, Crevice tool

Other accessories: Charging base

Accessory storage: In charging base

Weight and dimensions

Appliances per A-box: 2

Dimensions of A-box (LxWxH): 465 x 245 x 640 mm

Dimensions of packaging (LxWxH): 225 x 235 x 625 mm

Weight of product: 3.2 kg

