

# PHILIPS

Steam generator  
iron

FastCare

Max 5.5 bar pump pressure

Up to 270 g steam boost

2.2-l water tank capacity  
with detachable water tank



GC7717



## Fast and convenient ironing

### With detachable water tank

A large detachable water tank for easy refills, strong steam boost and the SteamGlide Ceramic soleplate will help you to reduce your ironing time significantly, while the carry lock and Smart CalcClean make ironing convenient.

#### Fast ironing with continuous powerful steam

- Powerful steam for ultimate crease removal
- Integrated easy-clean system for long-lasting performance
- Great scratch resistance and easy gliding

#### Extra convenience

- Lightweight steam generator for easier handling
- Large detachable water tank for easy refilling
- Safe and secure carry lock
- Automatic switch-off for safety and energy saving


# Highlights

## Safe carry lock



Your steam generator iron includes a safe carry lock, which securely fastens your iron to its base without the risk of it slipping or someone touching the hot soleplate. It ensures safe and easy transportation around the house, to and from storage.

## Safety auto off

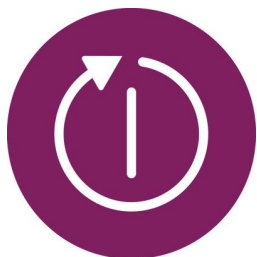

The safety auto-off function automatically switches off your steam generator iron if it has not been used for a few minutes. This saves energy and gives you peace of mind about safety.

## Smart Calc clean



Regular descaling protects your iron and maintains steam performance. The Smart Calc-Clean system is an integrated descaling and

cleaning function to extend the lifespan of your steam generator iron. The iron will remind you with both light and sound that cleaning and descaling is needed. Simply place your iron onto the Smart Calc-Clean container and start the process. It takes approx. 2 minutes for the dirty water and scale to be collected; your steam generator will beep once it's finished and ready to use again.

## Ultra-powerful steam



An ultra-fast ironing experience can be yours with revolutionary technology. The powerful and continuous steam tackles even tough creases, and thicker fabrics are smoothed out with ease and speed. Plus there's an extra steam boost if needed, perfect for vertical steaming or stubborn creases.

## 2.2-l detachable water tank



The detachable water tank allows you to easily refill anytime without stopping the appliance. It has a large filling hole so you can simply fill the water tank under the tap. It has a 2.2-l

capacity, so you get the convenience of up to 2 hours of continuous use with no need to top up the tank.

## Lightweight steam generator



Thanks to revolutionary ProVelocity technology, we've been able to make a powerful steam generator iron that is much lighter than traditional models. This means it's more stable when positioned on your ironing board and carrying it around is much easier.

## SteamGlide Ceramic soleplate



The SteamGlide ceramic soleplate is durable and non-stick, with high scratch resistance and a smooth glide over fabrics. Plus it's easy to clean, especially compared to aluminium soleplates.

# Specifications

## Technology

ProVelocity steam engine

## Fast crease removal

Continuous steam: up to 120 g/min

Power: 2400 W

Pressure: Max 5.5-bar pump

Ready to use: 2 min

Steam boost: up to 270 g

Steam-on-demand

Variable steam levels

Vertical steam

Voltage: 220 - 240 V

## Easy to use

Soleplate gliding performance: 3 stars

Soleplate name: SteamGlide Plus

Cord freedom (swivel): 360 degree cord freedom

Detachable water tank

Hose length: 1.6 m

Power cord length: 1.8 m

Ready to use: Light indicator, Sound indicator

Refill anytime during use

Safety auto off

Soleplate scratch resistance: 3 stars

Tap water suitable

Heat-up time: 2 min

Extra-large filling hole

## Scale management

Descaling and cleaning: Smart Calc Clean

Descaling reminder: Light, Sound, Yes

## Storage

Carry lock: For transportation and safety

Cord storage: Velcro fix

Hose storage: Hose storage compartment

## Accessories included

Calc clean container

## Size and weight

Packaging dimensions (W x H x D): 27.4 x 44 x 31.6 cm

Product dimensions (W x H x D): 22.9 x 25.9 x 42.3 cm

Weight of iron: 1.1 kg

Weight of iron + base: 3.3 kg

## Guarantee

2 year worldwide guarantee

