

PHILIPS

Bagless vacuum cleaner

PowerPro Compact

PowerCyclone 4 technology

TriActive nozzle

Animal



FC9326/09



Full performance

Less energy consumption

The new Philips PowerPro Compact delivers full cleaning performance thanks to the PowerCyclone 4 technology and the TriActive nozzle, engineered for high dust removal. The dust bucket is easy to empty, with no dust clouds.

Excellent cleaning results

- A-class performance on hard floors
- PowerCyclone 4 technology separates dust and air in one go
- The TriActive nozzle applies 3 cleaning actions in one go

Perfect for homes with pet hair

- Turbo brush, perfect for homes with pet hair

Convenience

- Advanced dust container design for easy to emptying
- Reach all corners thanks to the extra long ergonomic grip

Clean air filter system

- EPA10 filter system with AirSeal for healthy air

B

Highlights

A-class on hard floors



This product achieves the highest cleaning performance class on hard floors. 100% of dust is picked up!

PowerCyclone 4 Technology



PowerCyclone 4 technology maximizes airflow and performance by separating dirt from air in one go. It delivers remarkable cleaning results through highly efficient steps: 1) Air enters fast into the PowerCyclone thanks to the straight and smooth air inlet. 2) The curved airpass quickly accelerates the air upwards in the cyclonic chamber to separate the dust from the air.

Turbo brush



The Turbo brush allows deep cleaning of carpets, easily removing hair and fluff. The rotating brush inside the nozzle actively removes small dust particles and pet hair, resulting in a better cleaning performance.

Easy to empty dust container



The dust container is perfectly designed to dispose dust without creating a dust cloud. Thanks to its unique shape and smooth surface, dust is collected at one side of the container and evenly glides into the dust bin.

Extra long ergonomic grip




This ergonomically shaped grip is convenient in use. Its extra long design gives you farther reach, so you can easily clean hard to reach places.

EPA10 Clean air system



EPA10 filter and AirSeal capture the finest dust before the air is blown out for a dust-free environment and clean, healthy air.

TriActive nozzle

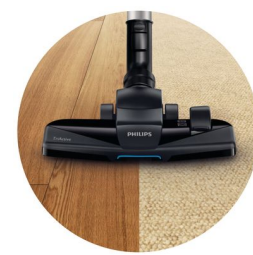

The TriActive nozzle applies 3 cleaning actions in one go: 1) It gently opens the carpet with its specially designed soleplate to remove the dust deep down. 2) It sucks up big bits with its larger opening at the front. 3) It picks up the dust and dirt closely alongside furniture and walls with its left and right side air channels.

Specifications

Performance

Annual energy consumption: 33.8 kW·h
Sound power level: 79 dB
Input power (IEC): 750 W
Airflow (max): 28,4 l/s
Vacuum (max): 17,4 kPa

Design

Color: Sparkling blue

Filtration

Dust capacity: 1.5 L
Exhaust filter: Sponge
Motor filter: Washable foam inlet filter

Usability

Action radius: 8 m
Cord length: 5 m
Tube type: Metal 2-piece telescopic tube
Tube coupling: Conical
Wheel type: Plastic
Carrying handle: Front

Nozzles and accessories

Standard nozzle: TriActive nozzle
Additional nozzle: Turbo brush, Hard floor nozzle
Accessories included: Crevice tool, Small nozzle

Weight and dimensions

Weight of product: 4.5 kg
Dimensions of product (LxWxH): 406 x 285 x 238 mm

Sustainability

Packaging: > 90% recycled materials
User manual: 100% recycled paper

