

# PHILIPS

Pressurised steam generator

260 g steam boost

5.2 bar

ECO



GC8370/02



## Great results, minimum effort

Endless, powerful steam with 1.4 litre water tank

Powerful yet surprisingly compact, this ironing system produces non-stop, high pressure steam, making ironing fast and easy. Thanks to the 1.4 litre detachable water tank, you can iron for hours without interruption.

### Fast and powerful ironing

- Continuous steam up to 120 g/min
- Vertical steam for crease removal in hanging fabrics
- Up to 5.2 bars of steam pressure
- Steam boost up to 260 g for tough wrinkle removal

### Comfortable ironing

- Lightweight iron for effortless ironing
- SteamGlide soleplate is Philips premium soleplate
- 3 Safety Auto Off triggers

### Iron up to 3 hours without refilling


- Extra-large detachable 1.4 litre water tank

### Easy to use

- Permanent anti-calc tablets inside delay scale build up
- Save 20% energy and 40% water consumption

# Highlights


## Detachable water tank

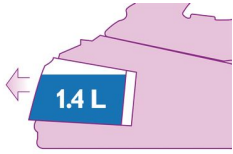

### Xtra Large detachable water tank


To make ironing effortless you need a lot of steam. High steam output means a lot of refilling. The extra-large 1.4 l water tank reduces the need for refilling.

## Lightweight

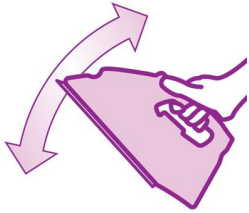

The iron is only 1.2 kg making ironing easy and effortless.

## Continuous steam up to 120 g/m

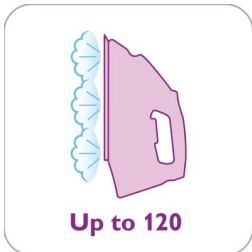

The Philips iron has a continuous steam output of up to 120 g/min thanks to the small amounts of water that are pumped into the boiler each time. For perfect and fast crease removal.

## Eco-setting

# ECO

Save 20% energy and 40% water consumption by selecting the eco-setting on your Philips Iron. The eco-setting offers the most energy efficient way to obtain perfect ironing results.

## Anti-calc Tablets



Permanent anti-calc tablets delay the formation of scale build up ensuring better protection for your system iron

## SteamGlide soleplate



The SteamGlide soleplate is the best Philips soleplate for your steam iron. It has great scratch resistance, glides excellently and is easy to clean.

## Vertical steam



This Philips iron has a vertical steam function, for crease removal in hanging fabrics.

## Up to 5.2 bar

# Up to 5.2 bar

Double your ironing speed with pressurised steam. Pressurised steam penetrates deep into fabrics, making your ironing fast and easy, even on difficult fabrics.

## Steam boost up to 260 g



The iron's 260 g steam boost enables you to easily remove even the most stubborn creases.

# Specifications

## Fast and powerful crease removal

Soleplate: SteamGlide  
Continuous steam output: 120 g/min  
Steam boost: 260 g  
Vertical steam  
Steam pressure: Up to 5.2 Bar  
Variable steam settings  
Steam tip  
Power: 2400 W  
Steam output

## Easy to use

Water tank capacity: 1400 ml  
Filling and emptying water: Detachable water tank  
Refill any time  
Heat-up time: 2 min  
Safety auto off  
Hose storage: Hose clip  
Power cord length: 1.8 m  
Hose length: 1.7 m

## Sustainability

ECO setting: 20% energy reduction

## Calc management

Calc clean solution: Anti-calc tablets and rinsing

## Technical specifications

Voltage: 220 - 240 V  
Product dimensions: 35 x 35 x 25 cm  
Weight of iron: 1.2 kg  
Weight of iron + base: 5 kg

