

PHILIPS

Handheld vacuum
cleaner


MiniVac

10.8V battery (Lithium)

Bagless Cyclonic

Crevice and brush tool

Eco

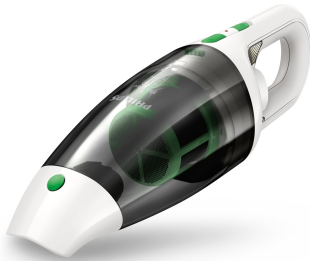

FC6148/01



Greener every day

Save up to 70% energy with efficient charging*

The Philips MiniVac EnergyCare 10.8 V vacuum cleaner has lightweight and powerful, long-lasting Lithium-Ion battery technology. The efficient charging system stops using power when the batteries full, so no energy is wasted.

High power guaranteed

- Longer-lasting lightweight Lithium-Ion batteries

Superior cleaning results

- Aerodynamic nozzle design for a better dust pick-up

Optimal filtration

- 2-stage bagless cyclonic airflow for optimal filtration

Save energy, not power

- Charging system switches off when batteries are full

Easily cleans delicate surfaces and narrow spaces

- Charging stand with brush tool and crevice tool



asimpleswitch.com

Highlights

Longer-lasting lightweight Lithium-Ion batteries



The powerful Lithium-Ion (Li-Ion) batteries of the Philips Mini Vac have longer-lasting power versus standard Nickel-Cadmium (NiCd) batteries. Li-Ion batteries are also very lightweight, giving you a more enjoyable cleaning experience.

2-stage bagless cyclonic




The bagless cyclonic airflow keeps the dirt inside rotating to ensure optimal, high suction power and lasting cleaning performance. Its 2-stage filtration system ensures that, once inside, the dirt cannot escape. The first filter blocks most dirt, while the second filter traps the finer dust particles.

Brush tool and crevice tool




The charging stand of the MiniVac holds both a brush tool and a crevice tool. The brush tool makes sure you don't damage delicate surfaces when cleaning, while the crevice tool gives you access to hard to reach places.

System switches off when full

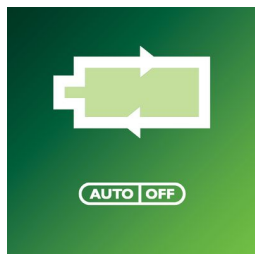

The efficient charging system automatically shuts off when the batteries are fully charged. Therefore it stops using power and it saves energy. Other charging system normally keep charging even when batteries are full and therefore waste energy.

Aerodynamic nozzle design

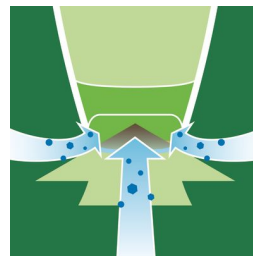

The aerodynamic nozzle design of the Philips MiniVac is created to ensure an optimum dust pick-up of even the most fine dust particles. The ergonomic shape of the nozzle helps you to clean even the most hard-to-reach areas.

Comfortable grip



The Philips Mini Vac has a looped handle that ensures optimum grip. You can grab the Mini Vac in any way you like.

One-step click-off nozzle



The Philips MiniVac vacuum cleaner is easy and quick to empty and hygienic to clean. The Philips MiniVac has a nozzle that easily clicks off in just one step, so you can empty the Mini Vac without touching the dirt.

Specifications

Design

Design features: Translucent dust chamber

Color: White and green

Filtration

Dust capacity: 0.5 L

Filter system: 2-stage cyclonic action

Nozzles and accessories

Other accessories: Charging base

Performance

Airflow (max): 950 l/min

Battery type: Li-Ion

Battery voltage: 10.8 V

Charging time: 8 hour(s)

Input power (max): 100 W

Noise level (Lc IEC): 81 dB

Runtime: 9 minute(s)

Suction power (max): 22 W

Vacuum (max): 4.3 kPa

Usability

Special features: Charging indication, Soft touch handle

Weight and dimensions

Dimensions of A-box (LxWxH): 508 x 335 x 490 mm

Appliances per A-box: 6

Dimensions of packaging (LxWxH): 460 x 160 x 160 mm

Weight of product: 0.8 kg

