

PHILIPS

Steam generator
iron

PerfectCare
Performer

Max 6.5 bar pump pressure

Up to 420g steam boost

1.8 L water tank capacity
with detachable water tank



GC8735/80



Ultra-fast ironing with powerful continuous steam

Philips PerfectCare Performer steam generator iron ensures a true simple, powerful, and no burn ironing experience. The powerful continuous steam penetrates deeply and continuously into the fibre to remove creases easily.

No temperature setting needed, guaranteed no burn

- Iron jeans to silk, no need to change temperature setting
- Safe to leave the hot soleplate on the ironing board

Fast ironing with continuous powerful steam

- Integrated easy clean system for long-lasting performance
- Philips best gliding with increased scratch resistance
- Save energy with ECO mode
- Powerful steam for ultimate crease removal

Extra convenience

- Lightweight steam generator for easier handling
- Large detachable water tank for easy refilling
- Safe and secure carry lock
- Automatic switch off for safety and energy saving
- Enjoy powerful ironing with minimum noise
- SoftGrip comfortable handle with ergonomic shape



asimpleswitch.com

Highlights

Ultra powerful steam



An ultra-fast ironing experience can be yours with revolutionary technology. The powerful and continuous steam tackles even rough creases, and thicker fabrics are smoothed out with ease and speed. Plus there's an extra steam boost if needed, perfect for vertical steaming or stubborn creases.

1.8L detachable water tank



The detachable water tank allows you to easily refill anytime without stopping the appliance. It has a large filling hole so you can simply fill the water tank under the tap. It has a 1.8 L capacity, so you get the convenience of up to 2 hours of continuous use, with no need to top-up the tank.

OptimalTEMP technology



With OptimalTEMP technology you'll no longer have to waste time changing temperature settings, waiting for the temperature to adjust or pre-sorting clothes. Iron fabrics from jeans to silk, with guaranteed no burns thanks to the perfect combination of temperature and continuous powerful steam.

Safe rest



Innovative OptimalTEMP technology guarantees no burn on all ironable fabrics. As well as the reassurance this provides whilst ironing, it also means you can leave the hot iron soleplate directly on your cotton ironing board without causing any damage. This helps to reduce any discomfort to your wrists, as you won't need to lift the iron to and from its base as often.

Lightweight steam generator




Thanks to revolutionary ProVelocity technology, we've been able to make a powerful steam generator iron that is much lighter than traditional models. This means it's more stable positioned on your ironing board and carrying it around is made much easier.

Ergonomic comfort handle



The ergonomically shaped SoftGrip handle ensures using your steam generator is much more comfortable. The top of the handle is finished with a super-soft material with a unique pattern that enhances the gripping experience. These features make holding your iron far more pleasant throughout the duration of your ironing session.

Smart Calc-Clean

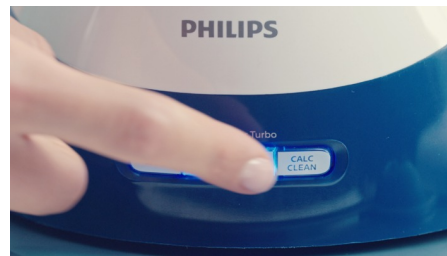

Regular descaling protects your iron and maintains steam performance. The Smart Calc-Clean system is an integrated descaling and cleaning function to extend the lifespan of your steam generator iron. The iron will remind you with both light and sound that cleaning and descaling is needed. Simply place your iron onto the Smart Calc-Clean container and start the process. It takes approx. 2 minutes for the dirty water and scale to be collected, your steam generator will beep once it's done and ready to use again.

SteamGlide Plus soleplate



The SteamGlide Plus soleplate is durable and non-stick is based on the ceramic finishing. It has an integrated titanium oxide layer for superior gliding performance.



[asimpleswitch.com](https://www.asimpleswitch.com)

Philips Green Logo

Philips Green Products can reduce costs, energy consumption and CO2 emissions. How? They offer a significant environmental improvement in one or more of the Philips Green Focal Areas – Energy efficiency, Packaging, Hazardous substances, Weight, Recycling and disposal and Lifetime reliability.

Specifications

Technology

For all ironable fabrics
No burns
OptimalTEMP technology
ProVelocity steam engine
Smart Control Processor
Quiet pump

Fast crease removal

Continuous steam: Up to 120 g/min
Power: 2600 W
Pressure: Max 6.5 bar pump
Ready to use: 2 min
Steam boost: Up to 420 g
Steam-on-demand
Variable steam levels
Vertical steam

Easy to use

Safe on all ironable fabrics: Even delicates like silk
Soleplate gliding performance: 5 stars
Soleplate name: SteamGlide Plus
Detachable water tank
Hose length: 1.6 m
Power cord length: 1.8 m
Precision steam tip
Ready to use: Light indicator, Sound indicator
Refill any time during use
Safety auto off
Soft grip
Soleplate scratch resistance: 4 stars

Scale management

Descaling and cleaning: Smart Calc Clean
Descaling reminder: Light, Sound, Yes

Storage

Carry lock: For transportation and safety
Cord storage: Velcro fix, Yes
Hose storage: Hose storage compartment

Size and weight

Product dimensions (WxHxL): 22 x 24 x 37 cm
Weight of iron: 1.22 kg
Weight of iron + base: 3.2 kg
Packaging dimensions (WxHxL): 24.6 x 33.5 x 44.9 cm

Guarantee

2 year worldwide guarantee

Green efficiency

Energy saving mode
Product packaging: 100% recycable
User manual: 100% recycled paper

