

PHILIPS

Bagless vacuum
cleaner

Marathon

AutoClean

ParquetCare



FC9228



Performs better for longer

Self-cleaning filter, no bag required

Optimal cleaning power every time

- AutoClean filter optimises suction power

Cleaning perfection

- 2000 Watt motor generating max. 400 Watt suction power

Easy cleaning even around furniture

- Tri-active nozzle with unique 3-in-1 action

Traps dust and allergens inside


- Ultra Clean Air HEPA 13 filter, 99.95% filtration

Superior hard-floor cleaning

- Super Parquet nozzle removes 3 x more sticky dirt


Highlights

AutoClean filter

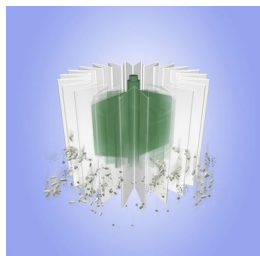

After every cleaning job, a simple push of a button will activate a rattle that thoroughly shakes the dust from the filter pleats into the dust bucket. Now the airflow is no longer blocked by the dust in the filter and suction power is almost like new.

2000 Watt motor

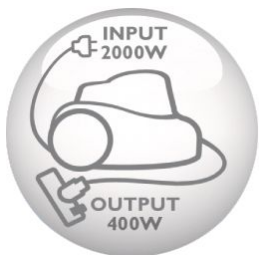

This vacuum cleaner has a 2000 Watt motor generating max. 400 Watt suction power for the ultimate cleaning perfection.

Super Parquet nozzle



The Super Parquet nozzle allows you to clean hard floors of all kinds thoroughly in one go, without the risk of harming them. Using the absorption capacity of the micro-fibre pads, together with the suction power of the vacuum cleaner, you achieve the best results without requiring any detergents or brushes.

Handy remote control



Handy remote control to change the suction power with your fingertips and without bending.

Specifications

Design

Colour: Emperor red

Filtration

Dust capacity: 1.5 l

Exhaust filter: Ultra Clean Air HEPA 13 filter

Nozzles and accessories

Accessories: Crevice tool, Small nozzle

Accessory storage: On handgrip

Additional nozzle: Super Parquet nozzle

Standard nozzle: TriActive nozzle

Performance

Airflow (max): 37 l/s

Input power (IEC): 1800 W

Input power (max): 2000 W

Noise level (Lc IEC): 78 dB

Suction power (max): 400 W

Vacuum (max): 33 kPa

Usability

Action radius: 12 m

Carrying handle: Top and front

Cord length: 9 m

Tube coupling: Button

Power control: Electronic on appliance

Special features: Remote control (Infra-red)

Tube type: Metal lacquered 2-piece telescopic tube

Wheel type: Rubber

Weight and dimensions

Weight of product: 7.5 kg

