

PHILIPS

AquaTrio Pro

3-in-1: vacuums, mops & dries

Triple-Acceleration Technology

Visible wet cleaning

All hard floors



FC7088/61



Vacuums, mops and dries in one go Visible wet cleaning for hard floors

AquaTrio Pro simultaneously vacuums, mops and dries, saving up to 50% time and effort*. Powerfull and gentle microfiber brushes to effectively remove dirt & stains. For perfect visible wet cleaning results on all hard floors**.

Revolutionary technology for perfect results

- Advanced cleaning performance for perfect results
- Removes up to 99% of bacteria*** and reduces allergens
- 2 micro-fiber brushes remove all dirt, dust and grime
- Allergy friendly quality tested by ECARF

Constant cleaning performance

- Separate clean and dirty water tanks
- Fast rotating brushes clean themselves while in use

Easy to use and efficient


- Cleans more than 60m2 with one water tank
- Self-cleaning appliance with flushing tray
- Effective with cold/warm tap water, with/without detergent
- Save up to 50% energy. Save up to 70% water*
- LED indicators to inform when action is required
- Ideal for all hard floors**



asimpleswitch.com

Highlights

Triple-Acceleration Technology

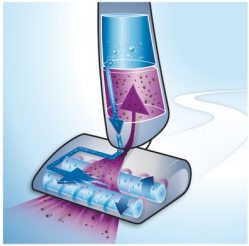

- Vacuums: powerful Aqua Cyclone pulls and removes all spills, dirt and dust - Mops: counter-rotating microfiber brushes apply a mist of clean water to efficiently lift dirt and grime. All dirt is dissolved in water and captured in a separate tank. - Dries: brush rotation speed creates airflow that leaves the floor virtually dry

Hygienic cleaning results




AquaTrio Pro removes up to 99% of all bacteria*** and reduces allergens. Because of the separation of a clean and dirty water tank all dust and allergens will be trapped in the dirty water tank.

Tap water



AquaTrio Pro gives excellent results using just cold or warm tap water. If required, you can also add detergent of your choice but use always a low-foaming or non-foaming floor cleaning detergent which is suitable for your hard floor.

Fast rotating brushes

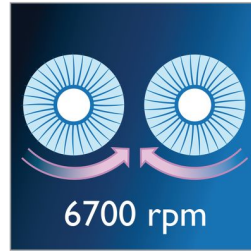

Powerful micro-fiber brushes rotate at 6700 rpm to effectively remove all spills, dust and dirt while adapting to the different shapes of the floor and even cleaning in crevices.

Separate water tanks




Separate clean and dirty water tanks ensure that you always mop with clean water, all dirt and allergens are contained in the dirty water tank.

Floor dries 50% faster




Floor dries up to 50% faster compared to regular mopping.

For all hard floors**

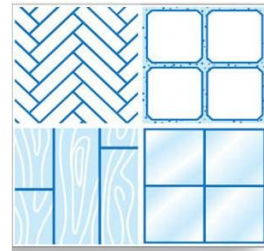

Perfect for all hard floors (suitable for wet mopping): wood, parquet, laminate, vinyl/linoleum, ceramics/tiles, marble/natural stone.

Cleans more than 60m²

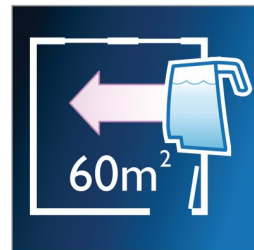

One full tank containing 700ml cleans more than 60m² of hard floor; cleaning large areas using only a minimal amount of water.

LED indicators

A LED indicator shows you when action is needed. It turns green when AquaTrio Pro is on and ready to clean. It turns blue when the watertanks need either to be filled up or emptied. And finally, it turns red when there is something interfering the brushes, so you can remove the obstacle and keep cleaning easily.



asimpleswitch.com

Philips Green Logo

Philips Green Products can reduce costs, energy consumption and CO₂ emissions. How? They offer a significant environmental improvement in one or more of the Philips Green Focal Areas – Energy efficiency, Packaging, Hazardous substances, Weight, Recycling and disposal and Lifetime reliability.

Specifications

Design

Color: Anthracite

Filtration

Filter system: Cyclonic. No filter to clean

Performance

Input power (IEC): Max 500 W

Mechanical power: 6700 rpm

Cleaning Technology: Triple-Acceleration Technology

Mopping element: 2 microfiber rotating brushes

Usability

Surface coverage per tank: More than 60m²

Clean water: Refill indicator: Yes, LED indicator

Action radius: 9.5 m

Power supply: Corded

Start up time: Immediately

Suitable for wood and parquet

Detergents that can be used: clear detergent or just water

Change brush while cleaning: Not needed

Filters to clean: None

Handle for easy lifting

Moves forwards or backwards

Clean water tank capacity (max): 0.65 L

Dirty tank: Full indicator: Yes, LED indicator

Dirty water tank capacity (max): 0.8 L

Cord length: 8 m

Sustainability

Energy efficient

Weight and dimensions

Dimensions of product (LxWxH): 305 x 320 x 1150 mm

Weight of product: 6.7 kg

Weight with packaging: 10.8 kg

Dimensions of packaging (LxWxH): 790 x 390 x 395 mm

Nozzles and accessories

Accessories included: Flushing tray

Nozzle width: 320 mm

