

PHILIPS

Bagless vacuum cleaner

1400 W

PowerCyclone 3

3 accessories



FC8085/01



Small on the outside, powerful on the inside

Compact vacuum cleaner

The compact Philips vacuum cleaner for powerful cleaning. Easy to store, carry and maneuver thanks to its light weight and small size. Easy to empty dust container helps avoiding dust clouds. Experience the freedom to move.

Good cleaning results

- PowerCyclone technology separates dust and air in one go
- 1400 Watt motor generating high suction power

Easy to clean

- Easy to clean washable filter
- Extra handle for easy carrying
- Advanced dust container design for hygienic emptying

Extra reach for perfect cleaning results

- Crevice tool help you to clean your furniture.
- Reach all corners thanks to the extra long ergonomic grip

Compact design

- Light weight and compact, giving you the freedom to move
- Small sized appliance for compact storage

Highlights

PowerCyclone technology



The PowerCyclone technology delivers best cleaning results in one go through 3 highly efficient steps: 1) Air enters fast into the PowerCyclone thanks to the straight and smooth air inlet. 2) The curved airpass quickly accelerates the air upwards in the cyclonic chamber. 3) At the top of the cyclone, the exit blades effectively cut out the dust from the air.

Crevice tool


Crevice tool help you to clean your furniture.

Easy to clean filter



Washable foam filter for life-long performance.

Extra long ergonomic grip

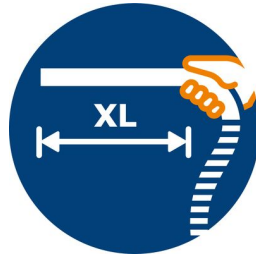

This ergonomically shaped grip is convenient in use. Its extra long design gives you farther reach, so you can easily clean hard to reach places.

1400 W motor



This vacuum cleaner has an efficient 1400 Watt motor generating high suction power for good cleaning results.

Easy Carrying




Extra handle for easy carrying.

Easy to empty dust container



The dust container is carefully designed to dispose collected dirt without creating a dust cloud. It is one-hand operated and thanks to its unique shape and smooth surface, you can easily control the emptying of the dust container.

Light weight and compact

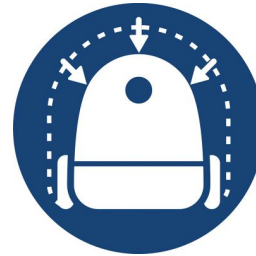

You can easily carry and roll the vacuum cleaner around when cleaning thanks to its light weight and small size.

Small sized appliance

Small sized appliance for compact storage.

Specifications

Performance

Input power (max): 1400 W
Suction power (max): 200 W
Input power (IEC): 1200 W

Design

Color: Citrus orange

Filtration

Exhaust filter: Foam filter
Motor filter: Microfilter
Dust capacity: 1.1 L

Usability

Tube type: Plastic 2-P tube
Carrying handle: Top and front
Tube coupling: Conical
Wheel type: Plastic
Action radius: 7 m
Cord length: 4.5 m
Dust full indicator

Nozzles and accessories

Standard nozzle: Multi-purpose nozzle
Accessories included: Crevice tool
Extra accessories: Long reach tool

Weight and dimensions

Weight of product: 3.1 kg

Sustainability

Packaging: > 90% recycled materials
User manual: 100% recycled paper

