

# PHILIPS

Bagless vacuum cleaner

EasyClean

1800W



FC8734/02



## Take the effort out of cleaning

Extra long cord, no bag required

The Philips EasyClean bagless vacuum cleaner is designed for those people who want a thorough cleaning result at minimal effort.

### **Easily removes dirt and dust**

- 1800 Watt motor generating max. 300 Watt suction power

### **Clean air in your home**

- Super Clean Air HEPA 12 filter, 99.5% filtration

### **Easy dust disposal**

- Dust bucket can easily be removed and emptied

### **Easy cleaning, even around furniture**

- TriActive nozzle with unique 3-in-1 action

### **Higher cleaning efficiency**

- Improved cyclone for longer lasting suction power

# Highlights

## 1800 Watt motor



Philips vacuum cleaner with 1800 Watt motor generating max. 300 Watt suction power to ensure a perfect cleaning result.

## Super Clean Air HEPA 12 filter




This Super Clean Air HEPA 12 filter catches at least 99.5% of all harmful microscopic vermin that causes respiratory allergies.

## Easy to empty dust bucket



The bagless vacuum cleaner has a transparent dust bucket that shows the dust removed from your floor and makes it easy to find back accidentally sucked up valuables.

## Improved cyclone

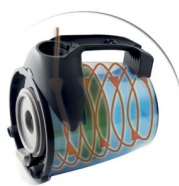

This EasyClean has an improved cyclone that filters even more dust out the the air.

## TriActive nozzle



The TriActive nozzle cleans your floor in 3 ways in one go: 1) A larger opening at the tip of the nozzle easily sucks up big bits. 2) It has maximum cleaning efficiency due to optimized airflow through the nozzle. 3) The two side brushes sweep up the dust and dirt closely alongside furniture and walls.

# Specifications

## Design

Color: Deep red

## Filtration

Exhaust filter: Super Clean Air HEPA 12 filter

Filter type: Gore-Tex HEPA 10

Dust capacity: 2 L

## Nozzles and accessories

Accessories included: Crevice tool, Small nozzle

Accessory storage: On handgrip

Standard nozzle: TriActive nozzle

## Performance

Airflow (max): 36 l/s

Input power (IEC): 1600 W

Input power (max): 1800 W

Noise level (Lc IEC): 79 dB

Suction power (max): 300 W

Vacuum (max): 29 kPa

## Usability

Carrying handle: Top and front

Tube coupling: Button

Power control: Electronic on appliance

Tube type: Metal lacquered 2-piece telescopic tube

Wheel type: Rubber

Action radius: 10 m

Cord length: 8 m

## Weight and dimensions

Weight of product: 6 kg

