

# PHILIPS

Food processor

Viva Collection

650 W

2 speeds + pulse

+32 functions

HR7632/90



## Maximum variety, minimum effort

With PowerChop Technology: for superior results

Philips Foodprocessor 3 in 1, comes with a large chopper bowl, 1,5L blender jar, 2 stainless steel disc inserts, citrus press, emulsifying disc and kneading tool. Easily prepare home made food for your entire family.

### Powerful precision

- 650 W motor for powerful processing
- PowerChop technology for superior chopping performance
- Accessories to easily perform 32+ functions
- 2 speed settings and pulse for maximum control

### Maximum variety of recipes

- Stainless steel disc inserts to slice & shred
- Citrus press for fresh orange or grapefruit juice
- Blender jar for blending, crushing and stirring
- Emulsifying tool for cream and egg whites
- Kneading tool for perfect dough preparation and mixing

### Reliably durable

- Sturdy base stands stable, even during kneading
- Form fitting couplings and tools for easy assembly
- 2 years of world wide guarantee


# Highlights

## 650 W motor



650 W motor for powerful processing

## PowerChop technology

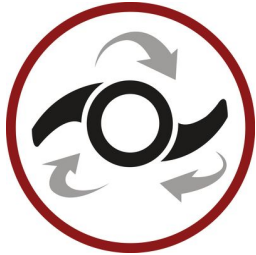

PowerChop technology is a combination of blade shape, cutting angle and inner bowl that provides a superior chopping result in both soft and hard ingredients. It is also perfect for making purées and mixing your cake batters!

## 32+ functions



Accessories to easily perform 32+ functions

## 2 speed settings and pulse

For best results, use the low speed setting (speed 1) to whip cream, beat eggs, create pastries and bread dough. The higher speed setting (speed 2) is well suited to chop onions and meats, blend soups and smoothies or shred, slice, grate or rasp vegetables.

## 1,5 L Blender jar



Blender jar for blending, crushing and stirring

## Citrus press for fresh juice



Reliable, simple and beautifully designed, the new Philips Jamie Oliver Food Processor boasts a number of useful accessories useful in creating fresh and healthy breakfasts, lunches and dinners. This accessory is ideal for extracting fresh juice from all types of citrus fruit such as oranges and grapefruit.

## Emulsifying tool



The perfect tool for whipping, whisking or emulsifying eggs or whipped cream. For best volume increase and fluffiness, use the low speed setting. Creating delicious desserts or mayonnaise has never been easier!

## Kneading tool



The kneading tool works the dough with the right force and power to enable you to make the tastiest cakes and biscuits.

## 2 years guarantee



Philips offers a full 2 years guarantee for this product to ensure you have long lifetime product to use every day.

## Stainless steel discs



Simply select the right stainless steel disc insert to prepare your favorite ingredient and click it onto the disc holder. Performance has been tested extensively to provide the best slicing and shredding results.

## Form fitting couplings & tools

This Philips food processor is designed to be very easy to assemble. Its parts simply click together thanks to the clever form fitting design of the accessories.

## Sturdy base

Sturdy base stands stable, even during kneading

# Specifications

## Accessories

**Included:** Chopping knife, Citrus press, Coarse shredding tool, Coarse slicing tool, Emulsifying tool, Jar, Kneading tool

## Country of origin

Made in: Brazil

## General specifications

**Number of speed settings:** 2

**Product features:** Dishwasher safe, Non-slip feet, Pulse, Safety lock

## Service

2-year worldwide guarantee

## Sustainability

**Packaging:** > 90% recycled materials

**User manual:** 100% recycled paper

## Technical specifications

**Capacity bowl:** 1.3 L

**Capacity jar:** 1.5 L

**Capacity XL chopper:** 1300 ml

**Cord length:** Minimum 0.85 m

**Frequency:** 60 Hz

**Power:** 600 W

**RPM blender (max):** 20.000 rpm

**RPM bowl (max):** 1.600 rpm

**Voltage:** 220 V

## Weight and dimensions

**Dimensions of packaging (LxWxH):**

4400x2500x3330 mm

**Dimensions of product (LxWxH):**

1800x1800x3900 mm

**Feeding tube diameter:** 75x45 mm

**Weight incl. packaging:** 3.53 kg

**Weight of product:** 2.78 kg

## Design

**Color:** Black & Red

**Color of control panel:** Silver

## Finishing

**Material accessories:** Stainless Steel and plastic

**Material blade:** Stainless steel

**Material jar:** SAN

**Material of main body:** PP plastic

