

# PHILIPS

Bagless vacuum cleaner

5000 Series

2000 W

PowerCyclone 7

Allergy H13 filter

TriActive nozzle

FC9570/62



## Maximum performance with PowerCyclone 7

### Easy and hygienic dust disposal

The Philips Bagless Vacuum 5000 Series is our most powerful compact vacuum. Achieve maximum deep cleaning results with minimum effort thanks to PowerCyclone 7 technology and TriActive nozzle which features 3 cleaning actions in one.

#### Superior performance


- Powerful 2000W motor for high suction power
- PowerCyclone 7 keeps strong suction power for longer
- TriActive nozzle for 3-way thorough cleaning action
- Power control function to adjust suction power
- Allergy H13 filter system captures >99.9% of fine dust

#### Effortless cleaning

- Compact design with front and top handle for easy carrying
- Dust container designed for hygienic emptying with one hand
- Soft brush integrated into handle & furniture nozzle
- Soft bumper and rubber wheels to protect furniture

# Highlights

## Powerful 2000W motor

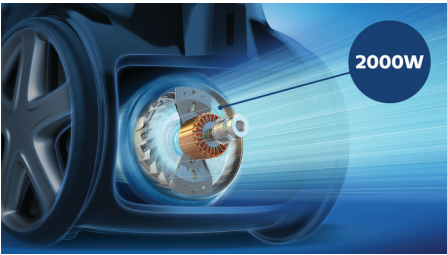

2000 W motor generates max 410W suction power for a thorough clean every time.

## PowerCyclone 7 Technology



PowerCyclone 7 technology features an aerodynamic design to minimize air resistance and ensure sustained strong suction power. Super accelerated air flow in the cylindrical chamber and unique exit blades effectively cut out the dust from the air.

## TriActive nozzle



TriActive nozzle utilizes 3 cleaning actions in one go. The specially designed soleplate removes dust from deep within carpets, while the large front opening sucks up big bits. Air channels and brushes on both sides of the nozzle pick up any dust and dirt alongside walls or furniture.

## Power control



Power control function easily adjusts suction for different cleaning tasks, from hard floors to soft furnishings.

## Compact and lightweight



Compact and lightweight design ensure both storing and lifting the vacuum is easy. The design includes top and front handles for effortless carrying.

## Hygienic dust disposal



Easy-to-empty dust container is designed for hygienic disposal with one hand, to help minimize dust cloud.


## Brush & furniture nozzle



Dusting brush tool is built into the handle so it's always ready to use on furniture, flat surfaces and upholstery. Furniture nozzle is

designed for optimal cleaning of soft furnishings like cushions, couches and arm chairs, even removing pet hair.

## Allergy H13 filter

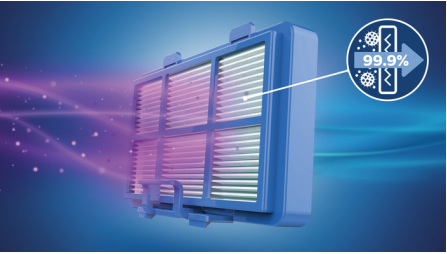

Allergy H13 filter system catches >99.9% of fine dust particles – including pollen, pet hair and dustmites – ideal for allergy sufferers. Filtration level is equivalent to HEPA 13\*.

## Soft bumper and rubber wheels



Soft bumper and rubber wheels protect furniture and prevent floor scratches while being easy to maneuver around your home.



## 2 years warranty

The warranty period for this product is 24 months



## Developed in Europe

Manufactured to Philips' highest quality standards.

# Specifications

## Performance

Input power (max): 2000 W  
Input power (IEC): 1700 W  
Sound power level: 72-82 dB  
Suction power (max): 410 W

## Usability

Action radius: 9 m  
Carrying handle: Top and front  
Tube type: Metal 2-piece telescopic tube  
Wheel type: Rubber  
Tube coupling: ActiveLock  
Power control: Electronic on appliance

## Design

Color: Dark Royal Blue

## Filtration

Dust capacity: 1.5 L  
Exhaust filter: Allergy H13 filter  
Motor filter: Washable filter  
Filtration level: HEPA13 level\*

## Nozzles and accessories

Accessories included: Crevice tool, Integrated brush  
Accessory storage: On tubeclip  
Additional nozzle: Furniture nozzle

Standard nozzle: TriActive nozzle

Extra accessories: Filter replacement:  
FC8010/02

## Sustainability

Packaging: > 90% recycled materials  
User manual: 100% recycled paper

## Weight and dimensions

Dimensions of product (LxWxH): 412 x 280 x  
280 mm  
Weight of product: 5 kg

