

# PHILIPS

Robot vacuum cleaner

SmartPro Compact

TriActive XL nozzle

6 cm slim design

4 wheels system

120 min runtime



FC8776/01



## Full performance, smart cleaning

Thorough clean, now 2 times faster\*

The Philips SmartPro Compact robot vacuum cleaner cleans for you, now 2 times faster due to the TriActive XL nozzle with extra-large width. Thanks to the Smart Detection System, the robot optimizes the cleaning strategy to clean your home

### Thorough cleaning performance

- TriActive XL nozzle with extra-large nozzle width
- 4 cleaning styles to adapt to rooms
- 2 extra-long brushes for corner cleaning

### Cleans where others can't reach

- 6 cm slim design to clean under low spaces
- 4-wheels system to easily cross over thresholds

### Cleans on its own

- Smart Detection System adapts cleaning to any environment
- Infrared sensors to avoid bumping into obstacles
- Ability to schedule cleaning 24 hours in advance
- Automatically returns to dock to recharge
- Remote to control the robot from a distance
- Extra filter for full year maintenance
- Powerful Li-Ion battery for 120 min operating time

# Highlights

## TriActive XL nozzle



TriActive XL nozzle offers you efficient and thorough cleaning performance, now 2 times faster due to: 1. Extra-wide nozzle covers twice as much floor area in one stroke. 2. The three suction inlets collect dust from front and both sides. 3. The flexible strip collects any dust left behind.

## 4 cleaning styles

Thanks to the 4 cleaning styles, your robot is able to choose an effective and efficient strategy to clean your room.

## 2 extra-long brushes

Thanks to the 2 extra-long brushes, your robot swipes dirt and dust from corners and plinths, and cleans where other robots cannot reach.

## Slim design



With its slim design at only 6 cm of height, your robot can easily reach under low spaces and remove the dust accumulated under your furniture.

## 4-wheels drive system

The new SmartPro Compact with TriActive XL nozzle has 4 wheels drive system, compared to traditional robots with 2 wheels. The 4-wheels drive helps your robot to cross over thresholds easily.

## Smart Detection System



The new robot vacuum cleaner is equipped with the Smart Detection System, a combination of smart chips, gyroscope and accelerometer, that makes the robot efficient to clean on its own. The Robot understands the environment and chooses an optimal cleaning strategy to clean your home as quickly as possible. The robot does not get jammed and returns to its docking station when necessary.

## Infrared sensors




The new Philips robot vacuum cleaner is equipped with 6 infrared sensors for detecting and avoiding obstacles such as walls, lamps or cables, so your floors are cleaned carefully. Finally, you can enjoy clean house without your interference.

## Scheduling function



The new robot vacuum cleaner offers a 24 hour scheduling function, so you can program your next cleaning session 24 hours in advance.

## Auto-return to docking station

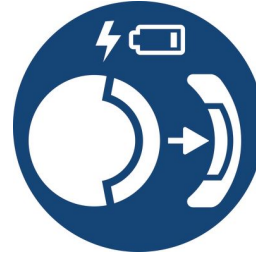

When the battery of the Philips robot vacuum cleaner is almost empty, it will automatically go to the docking station to charge itself, so it will get ready for its next cleaning session.

## Remote control



The remote control allows you to control the Robotic Vacuum cleaner from a distance and perform several actions. You can tell the robot to start and stop, guide it to any direction, change the cleaning path or ask the robot to go back to the docking station.

## Extra filter

Extra filter for full year maintenance.

## Powerful Li-Ion battery



The powerful Lithium-Ion battery has a longer lifetime and a shorter charging time than standard batteries. The new robot vacuum cleaner runs up to 120 min.

# Specifications

## Performance

Battery type: Li-Ion  
Battery voltage: 12.8 V  
Charging time: 4 hour(s)  
Runtime: 120 minute(s)  
Sound power level: 58 dB

## Usability

Dust full indicator  
24-hour scheduling  
Dust sensor  
Floor types: Hard floors

Smart detection system: 18 sensors  
Threshold climbing: 17 mm  
Cleaning modes: 4

## Design

Design features: Stairs detector  
Color: Bright copper

## Filtration

Dust capacity: 0.30 L  
Filter: 3M filter

## Nozzles and accessories

Accessories included: AC power adaptor, Side brushes  
Standard nozzle: TriActive XL nozzle  
Other accessories: 2 x Filter, Remote control, Docking station

## Sustainability

Stand-by power consumption: 0.62 W

## Weight and dimensions

Dimensions of product (LxWxH): 60.1 x 330 mm  
Weight of product: 1.73 kg

