

PHILIPS

Vacuum cleaner
with bag

Studio

EnergyCare

ParquetCare



FC9088/01



Greener every day

Save 30% energy with highly efficient HD motor*

Studio is for people who would like the performance of a big vacuum cleaner combined with the compactness of a small one. The new highly efficient HD motor uses up to 30% less energy, while keeping the excellent suction power.

Low power consumption, high-power results

- New 1250 Watt HD motor generates max. 350 Watt suction power

Carefree cleaning

- Ergonomically designed ComfortControl handle

Easy to use all over the house

- Two comfortable carrying handles for extra convenience

Superior hard-floor cleaning

- Super Parquet nozzle removes 3 x more sticky dirt

Easy cleaning, even around furniture


- Tri-active nozzle with unique 3-in-1 action



asimpleswitch.com

Highlights

New 1250 Watt HD motor

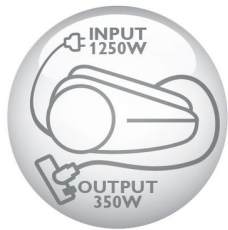

Highly efficient 1250 Watt HD (High Density) motor generates 350 Watt max. suction power, which means that you use 30% less energy without giving in on the cleaning result.

ComfortControl handle



This ergonomically designed handle helps to prevent strain on wrists. It offers effortless single handed manoeuvring. Enjoy easier cleaning.


Comfortable carrying handles



This vacuum cleaner has not one, but two carrying handles. When it is on its wheels, there is a handle on top which enables you to easily move the cleaner around with very little

bending. The second handle on the front side of the appliance enables you to comfortably carry it around in an upright position.

Super Parquet nozzle

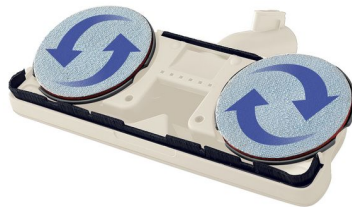

The Super Parquet nozzle allows you really clean hard floors of all kinds in one go, without the risk of harming them. Using the absorption capacity of the micro-fibre pads, together with the suction power of the vacuum cleaner, you achieve maximum result without requiring any detergents or brushes.

Tri-active nozzle

This unique nozzle is aerodynamically designed for maximum cleaning efficiency, has side brushes to remove dust from corners and curves, and has a front opening to pick up the big bits. Each stroke will deliver an immediate clean result.

HEPA AirSeal, HEPA 13 filter



This Philips vacuum cleaner has been designed in such a way that all the air taken in is passed through the washable HEPA 13 filter (99.95% filtration) before it is exhausted. No escape is possible.

Specifications

Design

Color: Vivid green and pearl beige

Filtration

Dust bag type: s-bag

Dust capacity: 3 L

Exhaust filter: Ultra Clean Air HEPA 13 washable filter

HEPA AirSeal

Nozzles and accessories

Accessories included: Crevice tool, Small nozzle

Accessory storage: On handgrip

Additional nozzle: Super Parquet nozzle

Standard nozzle: TriActive nozzle

Performance

Airflow (max): 39 l/s

Input power (IEC): 1250 W

Noise level (Lc IEC): 78 dB

Suction power (max): 350 W

Vacuum (max): 28 kPa

Usability

Action radius: 11 m

Carrying handle: Top and front

Clean Comfort cassette

Cord length: 8 m

Tube coupling: Button

Dust full indicator

Power control: Electronic on appliance

Tube type: Metal lacquered 2-piece telescopic tube

Wheel type: Rubber

