




**Saeco GranBaristo  
Super-automatic  
espresso machine**

- Brews 18 coffee varieties
- Integrated milk jug & frother
- Black
- 5 step adjustable grinder

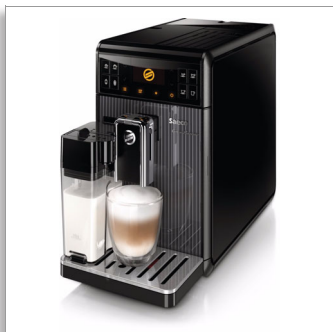

HD8964/47

Enjoy a unique variety of 18 one touch specialties

With the first one-finger removable brewing group

After 28 years Saeco has re-invented the bean-to-cup experience, crafting the new GranBaristo. A sleek espresso machine with a set of revolutionary technologies that brews quicker, hotter, offers more variety and streamlines maintenance

**Advanced technology designed for coffee perfection**

- Fine-tune the coffee's richness with 5 grinder settings
- 20,000 cups of finest coffee with durable ceramic grinders
- A hot coffee in no time thanks to the Thermospeed technology
- Variable brewing pressure for classic coffee and espresso

**A variety of coffees customized to your taste**

- Save your favorite coffee with 6 user profiles

**High comfort is part of the experience**

- One-finger removable brewing group for an effortless clean

**PHILIPS**

Saeco, a Philips brand

 **Saeco**



# Highlights

## 5-steps adjustable grinders



When it comes to the fineness of the grind, this machine never fails to satisfy. Different coffee blends require different levels of granularity for the full flavor to unfold. So the grind granularity of this machine has five adjustable settings - from the finest grind for a full-bodied espresso, to the coarsest for a lighter coffee.

## 100% Ceramic grinders



Our grinders are made of high-tech ceramic: exceptionally hard and precise. Fresh beans are gently ground, without risk of overheating: extracting all the best flavors and aroma, delivering a superior coffee taste for at least 20,000 cups.

## A hot coffee in no time



Enjoy perfectly hot, coffee without the wait, thanks to the powerful boiler with Saeco Thermospeed technology. The Thermospeed technology will flash-heat the coffee circuit when the machine is turned on and prevents the loss of heat ensuring perfect, hot coffee from the very first cup.

## Customize and save your cup



Each cup will be shaped exactly to your taste. The ultimate customisation feature lets you personalise and memorise all your drinks down to the finest detail. And as there's 6 user profiles to fill, everyone using the machine can claim their cup of perfection.

## Effortless clean with 1 finger



The Saeco GranBaristo is the only fully automatic espresso machine to offer a brewing group that can be removed using just one finger for an effortless cleaning.

## Unique variety of drinks



The Saeco GranBaristo offers an unparalleled variety of drinks to suit any occasion thanks to the patented VariPresso brewing chamber. The secret is in the adjustable brewing pressure; set it on high for an intense, rich espresso, or lower the pressure for a long, classic coffee.

## Super-automatic espresso machine

Brews 18 coffee varieties Integrated milk jug & frother, Black, 5 step adjustable grinder

HD8964/47

# Specifications

### Sustainability

- Power consumption brewing: 1900 W

### General specifications

- Cups at the same time: 2
- Suitable for: Whole coffee beans, ground coffee powder
- Type of carafe: Basic carafe
- Type of boiler: Thermospeed
- Type of display: LCD
- Special functions: Ceramic grinder, Integrated carafe, Pre-brewing, Ground coffee option, VariPresso brewing group
- Customizing per drink: Adjustable coffee strength, Adjustable temperature, Adjustable cup volume, Adjustable milk foam amount
- Ease of use and comfort: Removable water tank, Display, Removable spout
- Ease of cleaning & maintenance: Automatic de-scaling cycle, Removable brewing group, Automatic carafe cleaning
- Coffee drinks: Espresso, Cappuccino, hot water, Café Crème, frothed milk, Espresso Macchiato, Latte Macchiato, coffee, Ristretto, Americano, Café au lait

### Finishing

- Material boiler: Stainless steel (Inox)
- Material drip tray: Stainless steel

- Material of main body: Plastic
- Material water tank: Plastic

### Country of origin

- Made in: Italy

### Service

- 1-year guarantee

### Technical specifications

- Pump pressure: 15 bar
- Capacity milk carafe: 500 L
- Capacity bean container: 270 gr
- Capacity waste container: 20 servings
- Max. cup height: 75 - 165 mm
- Water boilers: 1
- Cord length: 0.8 m
- Capacity water tank: 1.7 L
- Frequency: 60 Hz
- Voltage: 120 V

### Weight and dimensions

- Weight of product: 13 kg
- Dimensions of product (WxDxH): 205 x 460 x 360 mm

### Design

- Color: Black

Issue date 2019-11-22

© 2019 Koninklijke Philips N.V.  
All Rights reserved.

Version: 3.0.1

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

EAN: 00 07502 00392 86

[www.philips.com](http://www.philips.com)