

PHILIPS

Steam floor cleaner

1500 W

Extra flat nozzle

3 microfiber pads

Adjustable steam

FC7028/01



Truly clean floors with the power of steam

Triangular, flat nozzle for best cleaning results

Truly clean floors with the power of steam. SteamCleaner Active removes dust and dirt for hygienic cleaning results on all hard floors. Its triangular extra flat nozzle reach even in hard to reach places like corners or alongside plinths.

Hygienic cleaning results

- Steam dissolves dirt, dust and stains
- 1500 W for powerful steam and fast heat up
- Steam kills up to 99.9% of bacteria and germs

100% chemical free cleaning

- 100% chemical free cleaning
- Suitable for tap water
- No detergent needed, no residues left on surfaces

Adjustable steam for all floors

- Right amount of steams for different floors
- For all floors*

Easy to use and efficient

- 3 Microfiber pads included
- Self standing
- Steam function stops when you pause

Highlights

Remove dirt easily

Dust and dirt is easily removed by SteamCleaner Active as steam dissolves and the microfiber pad lifts and traps dirt.

1500 W for powerful steam

1500 W for a fast heat-up time. SteamCleaner Active is ready to use in less than 30 sec. The LED indication light turns from white to blue when Steam Plus is ready to steam.

Steam kills bacteria and germs

**Kills up to
99.9%
of bacteria**

Enjoy the most hygienic steam cleaning results with Philips SteamCleaner Active. Philips SteamCleaner Active kills up to 99.9% of germs and bacteria. Sanitize all floors without chemicals and only the use of water.

100% chemical free cleaning



SteamCleaner Active works with water only. It does not leave any kind of chemical residues on your floor.

Suitable for tap water



SteamCleaner Active is specially developed to clean using tap water. Its Active Calc Filter decalcifies water automatically. We advise to replace the Active Calc Filter at least every 6 months to prevent calcification and enjoy great performance over lifetime.

No detergent needed




No detergent needed, no residues left on surfaces

Adjustable steam settings


With the adjustable steam setting SteamCleaner Active always releases the right amount of steam for the perfect clean, for all sealed floors, including hardwood and laminate.

For all floors*

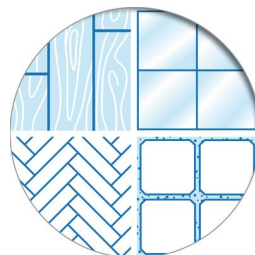


For all floors*

Washable microfiber pads

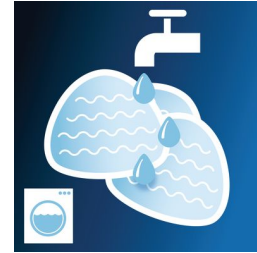

3 washable and durable microfiber pads are included. The soft microfiber material gently loosens, lifts, and absorbs dust and dirt. Removing dirt effectively and gently. The microfiber pads are machine-washable and easy to attach and remove.

Self standing

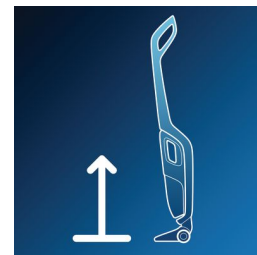

Self standing

Auto off for your safety

**Auto
off**

When you pause during steam cleaning the SteamCleaner Active stops steaming automatically in upright position. For extra safety and peace of mind.

Specifications

Design

Color: Sparkle Blue

Nozzles and accessories

Accessories included: 3 pads and 1 carpet glider

Cleaning: Washable microfiber pad

Performance

Input power (max): 1500 W

Input power (IEC): 1500 W

Steam Management

Heating-up time: <30 s

Runtime (steaming): 15 to 25 min

Steam capacity: 13 to 25 g/min

Steam temp. at nozzle: >100 °C

Watertank size: 450 ml

Active calc filter

Usability

Cord length: 6 m

Removable stick assembly: Stick in / Stick Out

Stand by mode: Auto steam shut-off

Cord storage: On stick

Weight and dimensions

Dimensions microfiber pad: 27x11 cm

Dimensions nozzle: 210 x 230 cm

Weight (kg): <3 kg

