

# PHILIPS

Garment Steamer

ComfortTouch  
Advanced

AirStretch technology

SmartFlow steam plate

2200W

5 steam settings



GC576/66



## Effortless de-wrinkling from top to bottom

### With innovative AirStretch technology

Our new ComfortTouch Advanced garment steamer gives you great ironing results in one go, thanks to extra powerful steam and innovative AirStretch technology. Gentle suction lightly stretches the fabric flat for safe, easy wrinkle removal.

#### Reliable and safe

- Automatically switches to standby mode for peace of mind
- Safe on all ironable fabrics, no burns guaranteed
- Easy Rinse descaling for years of effective use
- PVC free silicon steam hose

#### Quick de-wrinkling


- Powerful continuous steam for fast crease removal
- Fabric brush for deeper steam penetration on thick garments
- AirStretch technology for better ironing results in one go
- SmartFlow steam plate for great results

#### More efficient with less effort

- Continuous steam removes odors and kills 99.9%\* of bacteria
- 5 steam settings for different kinds of fabric
- Hang&Lock keeps your hanger securely in place
- Pleats made easy with pleat making accessory

# Highlights

## Auto shut off

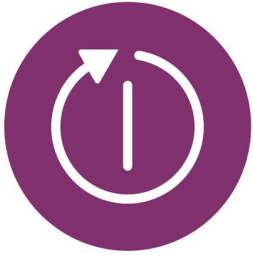

The steamer automatically switches to standby mode when the water tank is empty, so you have peace of mind even if you forget to switch it off.

## Safe on all ironable fabrics



The steamer is safe to use on all ironable fabrics and garments. The steam plate can be safely pressed against any clothing with no risk of burning – a great solution for delicate fabrics, like silk.

## Easy Rinse descaling




Prolong the lifetime of your appliance by using the Easy Rinse descaling function regularly.

## PVC free silicon steam hose



The steam hose is made of silicon material which is the safe and healthy choice for use with steam. As the safety and health of your family is important, no PVC is used in the steam hose.

## 99.9% bacteria-free\*

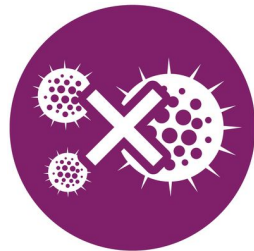

Hot steam refreshes your clothes and kills up to 99.9% of bacteria\*. Less frequent washing and dry cleaning saves time and money, and helps clothes last longer.

## Powerful continuous steam



Powerful continuous steam for fast crease removal

## Brush accessory



Use the brush accessory with thicker garments like coats for better steam penetration and a smoother finish.

## AirStretch technology

Achieve better ironing results faster, with air suction. This innovative AirStretch technology uses adjustable suction force to gently pull and stretch the garment while keeping it close for deeper steam penetration. This combination helps you to achieve great ironing results with only one hand.

## SmartFlow steam plate



SmartFlow technology ensures great ironing results as the optimized steam flow heats up the steam plate. This keeps the steam plate at an optimal, safe temperature for all fabrics while effectively preventing wet spots.

## 5 steam settings



Set your preferred steam setting for optimal results on different fabric. Use low steam for thinner fabrics and a more powerful setting for thicker fabrics and coats.

# Specifications

## Technology

AirStrech Technology  
For all ironable fabrics

## Fast crease removal

Continuous steam: up to 42 g/min  
Power: Max 2200 W  
Ready to use: <1 min  
Variable steam: 5 levels  
Voltage: 220 - 240 V

## Easy to use

Safe on all ironable fabrics: Even delicates like silk  
Soleplate name: SmartFlow steam plate  
Water tank capacity: 1800 ml  
Detachable water tank

## Hang&Lock

Hose length: 1.3 m  
Power cord length: 1.6 m  
Silicone steam hose  
Auto shut off

## Scale management

Descaling and cleaning: Easy Rinse

## Accessories included

Brush  
Glove for extra protection  
Pleat maker  
Adjustable double pole  
Garment hanger w trouser clips

## Size and weight

Packaging dimensions (WxHxL):  
37x46x64.5 cm  
Product dimensions (WxHxL): 33x173x37 cm

## Guarantee

2 year worldwide guarantee

## Design

Color: Chalky camel gold

