

# PHILIPS

Bagless vacuum cleaner

EasyClean

1800W

Animal

FC8722/01



## Take the effort out of cleaning

No bag required

EasyClean is designed for those people who want a thorough cleaning result at minimal effort.

### **Easily removes dirt and dust**

- 1800 Watt motor generating max. 300 Watt suction power

### **Clean air in your home**

- Super Clean Air HEPA 12 filter, 99.5% filtration

### **Easy dust disposal**

- Dust bucket can easily be removed and emptied

### **Easy cleaning, even around furniture**


- TriActive nozzle with unique 3-in-1 action

### **Outstanding results on carpets and furniture**

- Turbo Brush nozzle removes 25% more hairs and dust


# Highlights

## 1800 Watt motor

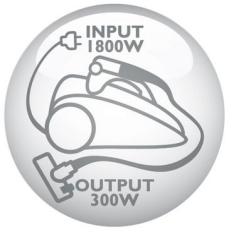

Philips vacuum cleaner with 1800 Watt motor generating max. 300 Watt suction power to ensure a perfect cleaning result.

## Super Clean Air HEPA 12 filter

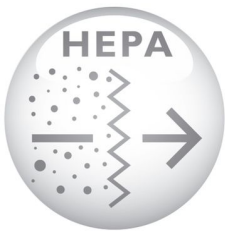

This Super Clean Air HEPA 12 filter catches at least 99.5% of all harmful microscopic vermin that causes respiratory allergies.

## Easy to empty dust bucket



The bagless vacuum cleaner has a transparent dust bucket that shows the dust removed from your floor and makes it easy to find back accidentally sucked up valuables.

## Turbo Brush nozzle



The Turbo Brush nozzle allows deep cleaning of carpets and quick hair and fluff removal from carpets. The rotating brush actively removes small dust particles and hairs, resulting in a 25% better cleaning performance on carpets. The wheels of the nozzle prevent damage in case of use on hard-floors.

## TriActive nozzle



The TriActive nozzle cleans your floor in 3 ways in one go: 1) A larger opening at the tip of the nozzle easily sucks up big bits. 2) It has maximum cleaning efficiency due to optimized airflow through the nozzle. 3) The two side brushes sweep up the dust and dirt closely alongside furniture and walls.

# Specifications

## Performance

Airflow (max): 34 l/s  
 Input power (IEC): 1600 W  
 Input power (max): 1800 W  
 Noise level (Lc IEC): 79 dB  
 Suction power (max): 300 W  
 Vacuum (max): 26.5 kPa

## Design

Color: Raven black

## Filtration

Exhaust filter: Super Clean Air HEPA 12 filter  
 Filter type: Gore-Tex HEPA 10  
 Dust capacity: 2 L

## Usability

Carrying handle: Top and front  
 Tube coupling: Button  
 Power control: Electronic on appliance  
 Tube type: Metal lacquered 2-piece telescopic tube  
 Wheel type: Rubber  
 Action radius: 10 m  
 Cord length: 7 m

## Nozzles and accessories

Accessories included: Crevice tool, Small nozzle  
 Accessory storage: On handgrip  
 Additional nozzle: Turbo brush  
 Standard nozzle: TriActive nozzle

## Weight and dimensions

Weight of product: 6 kg

## Sustainability

Packaging: > 90% recycled materials  
 User manual: 100% recycled paper

