

PHILIPS

Vacuum cleaner
with bag

Performer Expert

5L



FC8721/09



Full performance

Less energy consumption

The new Philips Performer Expert delivers highest dust pick-up ratings* on all floors thanks to the AirflowMax technology and unique TriActiveMax nozzle, engineered for highest dust pick-up. Great cleaning results, even as the bag fills up!

Outstanding cleaning results

- Revolutionary AirflowMax technology for extreme performance
- Energy efficient motor for high-power results
- New 3-in-1 TriActiveMax nozzle maximizes dust pick-up

Ultimate convenience

- 5L dust capacity for longer cleaning
- SmartLock coupling to easily adjust to each cleaning task
- 11m long reach for convenient cleaning
- Variable power setting

Integrated Anti-Allergy system

- Allergy friendly quality tested by ECARF
- HEPA13 with HEPA AirSeal retains more than 99% of dust
- s-bag Ultra Long Performance captures even more fine dust



asimpleswitch.com

Highlights

AirflowMax technology



AirflowMax technology maximizes the airflow, allowing the dustbag to unfold uniformly, so you get high performance, even as the bag fills-up!

High efficiency motor




The high efficiency motor has been optimized to use less energy in order to generate more airflow.

TriActiveMax nozzle



TriActiveMax nozzle with 3-in-1 cleaning actions perfectly seals to the floor to maximize dust pick-up. 1) It gently opens the carpet with its specially designed soleplate to remove the dust deep down. 2) It sucks up big bits with its larger opening at the front 3) It sweeps up the dust and dirt closely alongside furniture and walls with its two side brushes.

Long reach

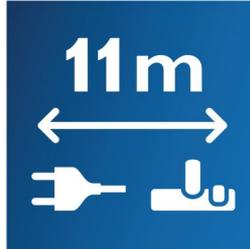

The 11m reach allows you to clean a larger surface without having to switch the plug.

SmartLock coupling




The unique Philips SmartLock coupling on nozzles and the telescopic tube easily connects, and disconnects, these parts during cleaning. The SmartLock coupling intuitively allows you to adjust the telescopic tube to your preferred height.

5L dust capacity



The specially designed 5L dust chamber allows you to make optimal use of your dust bag, so you can clean for longer.

Power control

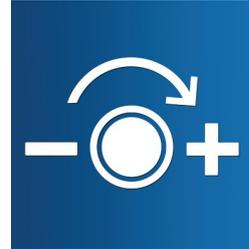

The variable power setting allows you to select the optimal level of suction for the different types of surfaces you vacuum.

ECARF certified



This vacuum cleaner with HEPA 13 filtration is certified as Allergy friendly by the European Centre for Allergy Research Foundation. The HEPA 13 filter purifies the exhaust air up to 99,95% of allergens from; cat & dog hairs, dust mites or pollen to support an allergy friendly home environment.



asimpleswitch.com

Philips Green Logo

Philips Green Products can reduce costs, energy consumption and CO2 emissions. How? They offer a significant environmental improvement in one or more of the Philips Green Focal Areas – Energy efficiency, Packaging, Hazardous substances, Weight, Recycling and disposal and Lifetime reliability.

Specifications

Performance

Sound power level: 78 dB
Input power (IEC): 650 W
Airflow (max): 30,2 l/s
Vacuum (max): 16,3 kPa

Design

Color: Full red

Filtration

Dust capacity: 5 L
Dust bag type: s-bag Ultra Long Performance
Exhaust filter: HEPA 13
Motor filter: Triple layer microfilter
HEPA Air Seal

Usability

Action radius: 11 m
Cord length: 8 m
Power control: Electronic on appliance
Tube type: Metal 2-piece telescopic tube
Tube coupling: SmartLock
Wheel type: Rubber
Carrying handle: Top and front
Dust full indicator

Nozzles and accessories

Standard nozzle: TriActiveMax nozzle
Accessories included: Crevice tool, 2-in-1 brush/small nozzle
Additional nozzle: Hard floor nozzle

Sustainability

Packaging: > 90% recycled materials
User manual: 100% recycled paper

Weight and dimensions

Weight of product: 5 kg
Dimensions of product (LxWxH): 500 x 310 x 300 mm

