

PHILIPS

Steam iron


Azur Performer Plus

Steam 50g/min; 190g steam boost

T-ionicGlide soleplate

Safety Auto off + Anti-calc

2600 Watts

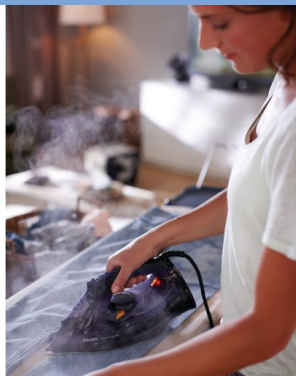

GC4520/30



Faster, Easier and Smarter

With our best gliding soleplate yet

The Philips steam iron Azur Performer combines powerful performance with ease of use. Combining easy Quick Calc Release with our 5-star-rated best-gliding T-ionicGlide soleplate and Safety Auto Off to give optimal ironing results, easily.

Fast and powerful performance

- 2600 W for quick heat-up and powerful performance
- Steam output of up to 50 g/min for better crease removal
- Steam boost up to 190 g

Easy gliding on all fabrics

- T-ionicGlide: our best 5-star rated soleplate

Safe ironing

- Self-Clean for effective calc removal
- Iron switches off automatically when left unattended
- Quick calc release to remove scale from your steamer

Comfortable ironing

- Auto Steam Control for the right steam for each garment
- Triple precision tip for optimal control and visibility
- Optimal weight for easier manoeuvrability over your garments



asimpleswitch.com

Highlights

2600 W for quick heat-up



2600 W for quick heat-up and powerful performance.

Steam up to 50 g/min



Continuous steam output of up to 50 g/min gives you the perfect amount of steam to efficiently remove all creases.

Steam boost up to 190 g



The steam boost can be used for vertical steaming and tough creases.

T-ionicGlide soleplate



T-ionicGlide is our best gliding and scratch-resistant, 5-star rated soleplate with integrated Titanium-Oxide layer.

Self-Clean



In addition to the built-in calc container, the self-clean function of your soleplate will remove the most stubborn calc. A clean soleplate will improve your steam performance and ironing results.

Safety auto off



The steam iron shuts off automatically when left unattended. It will switch off after 8 minutes when left standing on its heel rest and after 30 seconds when left resting on its soleplate or sides.

Auto Steam Control



Auto Steam Control takes away the worry of selecting the amount of steam you need. Just select the temperature for the garments you're ironing and off you go.

Triple Precision Tip



The pointed tip on the Philips Azur Performer is very precise in 3 ways: it has a pointed tip, a button groove and a sleek nose design. The Triple Precision tip enables you to reach into even the trickiest areas, e.g. around buttons or between pleats.

Optimal weight



The iron has an optimal weight for moving easily over any garment, making ironing less of a hassle and making it easy to move the iron constantly between the board and its heel rest.



[asimpleswitch.com](https://www.asimpleswitch.com)

Philips Green Logo

Philips Green Products can reduce costs, energy consumption and CO2 emissions. How? They offer a significant environmental improvement in one or more of the Philips Green Focal Areas — Energy efficiency, Packaging, Hazardous substances, Weight, Recycling and disposal and Lifetime reliability.

Specifications

Fast and powerful crease removal

Soleplate: T-ionicGlide
Continuous steam output: 50 g/min
Steam boost: 190 g
Vertical steaming
Spray
Power: 2600 W
Variable steam settings

Easy to use

Water tank capacity: 300 ml
Filling and emptying water: Side-opening door
Drip stop
Soft grip

Safety auto off

Cord storage: Cord clip
Power cord length: 2 m

Calc management

Calc clean solution: Self-clean
Quick Calc Release

