

PHILIPS

Vacuum cleaner
with bag

Jewel

2000W

Animal



FC9067/01



Beautiful results in a blink of an eye

TriActive nozzle with unique 3-in-1 action

The Jewel range is ideal for those who want beautiful results fast. It comes with the patented TriActive nozzle, which gives you three cleaning actions in one stroke.

Beautiful floors in a blink of an eye

- 2000 Watt motor generating max. 450 Watt suction power

Clean air in your home

- Super Clean Air HEPA 12 filter, 99.5% filtration

Easy cleaning, even around furniture

- TriActive nozzle with unique 3-in-1 action

Leaves a fresh and clean scent

- Active fragrance control dispenses a pleasant smell

Outstanding results on carpets and furniture

- Turbo Brush nozzle removes 25% more hairs and dust

Highlights

2000 Watt motor




Highly efficient 2000 Watt motor generates max. 450 Watt suction power for perfect cleaning results.

Super Clean Air HEPA 12 filter



This Super Clean Air HEPA 12 filter catches at least 99.5% of all harmful microscopic vermin that causes respiratory allergies.

Active fragrance control

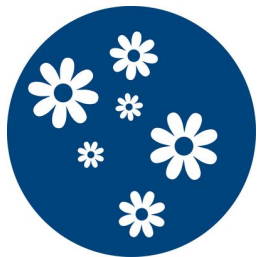

To give a special fresh clean smell, each Jewel comes with a fully integrated and adjustable active fragrance control. Scent granules are available in blossom scent (FC8025) and lemon scent (FC8026).

Turbo Brush nozzle



The Turbo Brush nozzle allows deep cleaning of carpets and quick hair and fluff removal from carpets. The rotating brush actively removes small dust particles and hairs, resulting in a 25% better cleaning performance on carpets. The wheels of the nozzle prevent damage in case of use on hard-floors.

TriActive nozzle



The TriActive nozzle cleans your floor in 3 ways in one go: 1) A larger opening at the tip of the nozzle easily sucks up big bits. 2) It has maximum cleaning efficiency due to optimized airflow through the nozzle. 3) The two side brushes sweep up the dust and dirt closely alongside furniture and walls.

Design

Color: Macaw green

Filtration

Dust bag type: s-bag

Exhaust filter: Super Clean Air HEPA 12 filter

Dust capacity: 3 L

Nozzles and accessories

Accessories included: Crevice tool, Small nozzle

Accessory storage: On handgrip

Additional nozzle: Turbo brush

Standard nozzle: TriActive nozzle

Performance

Airflow (max): 43 l/s

Input power (IEC): 1800 W

Input power (max): 1800 W

Noise level (Lc IEC): 76 dB

Suction power (max): 450 W

Vacuum (max): 32 kPa

Usability

Active fragrance control

Carrying handle: Front

Clean Comfort cassette

Tube coupling: Button

Dust full indicator

Power control: Electronic on appliance

Tube type: Metal lacquered 2-piece telescopic tube

Wheel type: Rubber

Action radius: 10 m

Cord length: 7 m

Weight and dimensions

Weight of product: 5.7 kg

